



IES7110 Series

Layer 2 Managed Industrial Ethernet Switch

User Manual

Document Version: 01

Issue Date: 10/19/2023

Copyright © 2023 3onedata Co., Ltd. All rights reserved.

No company or individual is allowed to duplicate or transmit this manual in any forms without written permission issued by 3onedata Co., Ltd.

Trademark statement



3onedata, **3onedata** and **3One data** are the registered trademark owned by 3onedata Co., Ltd. And other trademarks mentioned in this manual belong to their corresponding companies.

Note

Purchased product, service or features should be constrained by 3onedata commercial contracts and clauses. The whole or part product, service or features described in this document may beyond purchasing or using range. 3onedata won't make any statement or warranty for this document content unless any other appointment exists.

Due to product version upgrading or other reason, this document content will be upgraded periodically. Unless other appointment exists, this document only for usage guide, all statement, information and suggestion in this document won't constitute any warranty.

3onedata



Please scan our QR code
for more details



Embedded Industrial
Ethernet Switch Modules

Embedded Serial
Device Server Modules



Industry-specialized
Products
(Rail Transit, Power,
Smart City, Pipe Gallery...)



Honor·Quality·Service



Layer 2 (Unmanaged)
Managed Industrial
Ethernet Switch

Layer 3 Managed
Industrial Ethernet Switch
Industrial PoE Switch



BlueEyes pro

BlueEyes Pro
Management Software
VSP Virtual Serial Port
Management Software
SNMP Management
Software



Modbus Gateway
Serial Device Server
Media Converter
CAN Device Server
Interface Converter



Industrial Wireless
Products

3onedata Co., Ltd.

Headquarter address:

3/B, Zone 1, Baiwangxin High Technology Industrial park, Nanshan
District, Shenzhen, 518108 China

Technology support:

support@3onedata.com

Service hotline:

+86-400-880-4496

E-mail:

sales@3onedata.com

Fax:

+86 0755-2670-3485

Website:

<http://www.3onedata.com>

Preface

Managed Industrial Ethernet Switch User Manual has introduced this series of switches:

- Product features
- Product network management configuration
- Overview of related principles of network management

Audience

This manual applies to the following engineers:

- Network administrators responsible for network configuration and maintenance
- On-site technical support and maintenance personnel
- Network engineer

Text Format Convention




Format	Description
""	Words with “” represent the interface words. Such as: “Port No.”.
>	Multi-level path is separated by ">". Such as opening the local connection path description: Open "Control Panel> Network Connection> Local Area Connection".
Light Blue Font	It represents the words clicked to achieve hyperlink. The font color is as follows: ‘Light Blue’.

Symbols

Format	Description
 Notice	Remind the announcements in the operation, improper operation may result in data loss or equipment damage.

Format	Description
 Warning	Pay attention to the notes on the mark, improper operation may cause personal injury.
 Note	Conduct necessary supplements and explanations for the description of operation content.
 Key	Configuration, operation, or tips for device usage.
 Tips	Pay attention to the operation or information to ensure success device configuration or normal working.

Button Operation Convention

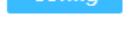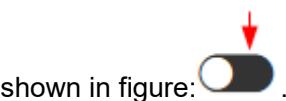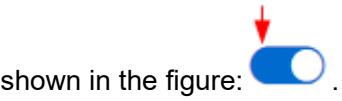Format	Description
 Logout	There is a logout button in the upper right corner of the webpage. After clicking it, the webpage returns to the login page.
 Reboot	There is a restart button in the upper right corner of the webpage. After clicking, a restart confirmation box pops up. After confirmation, the device will restart.
 Save	There is a Save button in the upper right corner of the webpage. Click it to save the current device configuration.
 Add	Click the Add button to add a line of configuration. Note that repeated configuration may result in data overwrite.
 Delete	Check the line to be deleted, and then click the Delete button to delete the configuration.
 Config	Check the line to be configured, and then click the configure button to enter the configuration page.
  Enable	Click the right side of the switch to enable the function, as shown in figure:  . Click the left side of the switch to disable the function, as shown in the figure:  .
 Apply	Click the Apply button to submit the current configuration.

Revision Record

Version No.	Revision Date	Revision Note
01	10/19/2023	Product release

Contents

PREFACE	1
CONTENTS	1
1 LOG IN TO THE WEB INTERFACE	1
1.1 SYSTEM REQUIREMENTS FOR WEB BROWSING.....	1
1.2 SET THE IP ADDRESS OF PC.....	1
1.3 LOGIN TO THE WEB CONFIGURATION INTERFACE	3
2 SYSTEM INFO	4
3 LOGIN CONFIG	6
3.1 IP ADDRESS.....	6
3.2 USER.....	7
3.3 PROTOCOL AUTHORIZATION	8
4 PORT CONFIG	10
4.1 PORT SETTING.....	10
4.2 LINK AGGREGATION.....	11
4.3 PORT SPEED LIMIT.....	13
4.4 STORM CONTROL	14
4.5 PORT MIRRORING	16
4.6 PORT STATISTICS	17
4.6.1 Port Statistics-Overview	17
4.6.2 Port Statistics-Port	18
5 LAYER-2 CONFIG	20
5.1 VLAN.....	20
5.1.1 Global Config	21
5.1.2 VLAN Config	23
5.2 MAC CONFIGURATION	25
5.2.1 MAC Address Table.....	25
5.2.2 Static MAC	26
5.3 SPANNING-TREE	27
5.3.1 Global Config	28
5.3.2 Port Config	29
5.3.3 Spanning Tree State Information	31
5.4 RING	33
5.4.1 Instance: Create Single Ring	36

5.5	IGMP-SNOOPING CONFIG	37
5.5.1	Global Config	38
5.5.2	Dynamic Multicast MAC	39
5.6	PORT LOOP DETECTION.....	40
6	NETWORK CONFIG	42
6.1	SNMP	42
6.1.1	View	42
6.1.2	Community	43
6.1.3	SNMP Group	44
6.1.4	V3 User	45
6.1.5	Trap Alarm.....	48
6.2	LLDP	49
6.2.1	Global Config	49
6.2.2	Port Config	50
6.2.3	Neighbor Info.....	52
6.3	DHCP-SERVER	52
6.3.1	DHCP Switch.....	53
6.3.2	Lease and Gateway Config	53
6.3.3	DNS Server.....	54
6.3.4	Port Bind	55
6.4	ACCESS CONTROL	56
6.4.1	Port Authentication	56
6.4.2	Authentication Database.....	58
6.5	QoS	59
6.5.1	Classification of QoS	59
6.5.2	CoS Mapping	62
6.5.3	ToS Mapping	63
6.6	MODBUS TCP	64
7	SYSTEM CONFIG	70
7.1	NETWORK DIAGNOSIS	70
7.1.1	Ping	70
7.2	NTP	71
7.2.1	NTP Config.....	71
7.2.2	Time Zone Config.....	72
7.3	ALARM.....	73
7.3.1	Relay Settings	73
7.3.2	Port Alarm	74
7.3.3	Power Alarm	75
7.3.4	Utilization Alarm	76
7.3.5	E-mail Alarm	77
7.4	CONFIG FILE CONFIG	79
7.4.1	Config File Update	79

7.4.2	Restore Factory Settings.....	80
7.5	UPGRADE	80
7.6	LOG INFO	81
7.6.1	Log Info	81
7.6.2	Syslog Server	83
8	FAQ	84
8.1	SIGN IN PROBLEMS	84
8.2	CONFIGURATION PROBLEM	84
8.3	ALARM PROBLEM.....	85
8.4	INDICATOR PROBLEM.....	86
9	MAINTENANCE AND SERVICE	88
9.1	INTERNET SERVICE	88
9.2	SERVICE HOTLINE	88
9.3	PRODUCT REPAIR OR REPLACEMENT	89

1 Log in to the Web Interface

1.1 System Requirements for WEB Browsing

Using the industrial Ethernet switch, the system should meet the following conditions.

Hardware and Software	System Requirements
CPU	Above Pentium 586
Memory	Above 128MB
Resolution	Above 1024x768
Color	256 colors or above
Browser	Internet Explorer 6.0 or above
Operating system	Windows XP Windows 7

1.2 Set the IP Address of PC

The switch default management is as follows:

IP Settings	Default Value
IP Address	192.168.1.254
Subnet mask	255.255.255.0

While configuring the switch via Web:

- Before remote configuration, please make sure the route between computer and switch is reachable.
- Before local configuration, please make sure the IP address of the computer is on

the same subnet to the one of switch.

Note:

While first configuring the switch, if it is a local configuration mode, please make sure that the network segment of current PC is 1.


Eg: Assume that the IP address of the current PC is 192.168.5.60, change the network segment "5" of the IP address to "1".

Operation Steps

Amendment steps are as follows:

Step 1 Open "Control Panel> Network Connection> Local Area Connection> Properties> Internet Protocol Version 4 (TCP / IPv4)> Properties".

Step 2 Change the "5" selected by the red frame in the figure to "1".

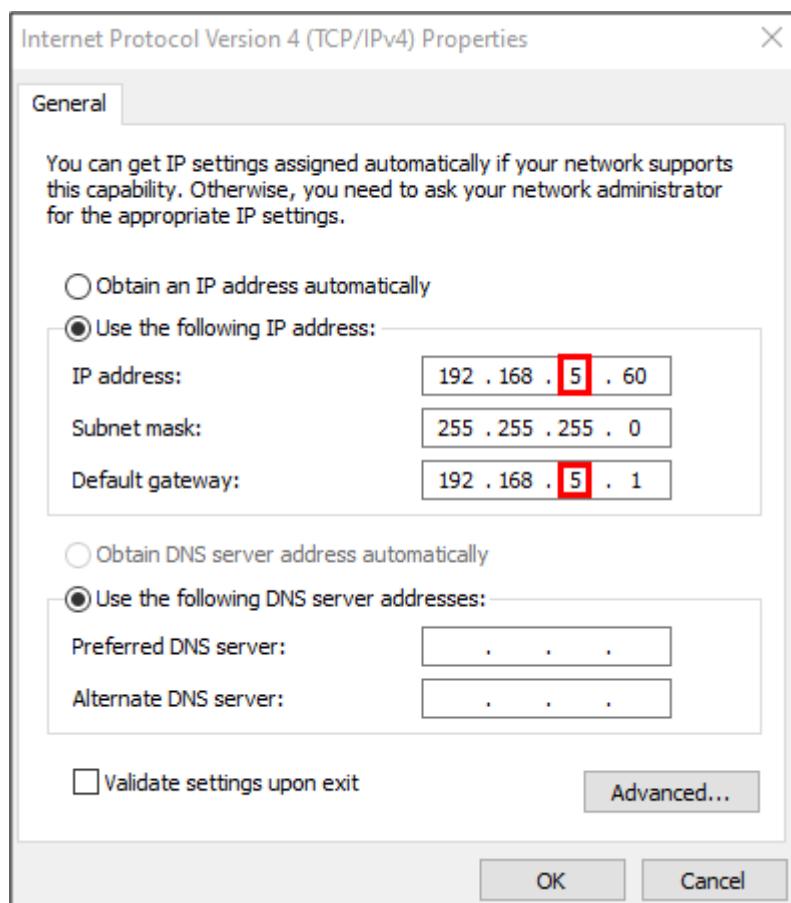

Step 3 Click "OK", modification is successful.

Step 4 End.

1.3 Login to the WEB Configuration Interface

Operation Steps


Log in to the WEB configuration interface as follows:

Step 1 Run the computer browser.

Step 2 Enter the address of the switch "http://192.168.1.254" in the address bar of the browser.

Step 3 Click the Enter key.

Step 4 Pop-up dialog box as shown below, enter the user name and password in the login window.

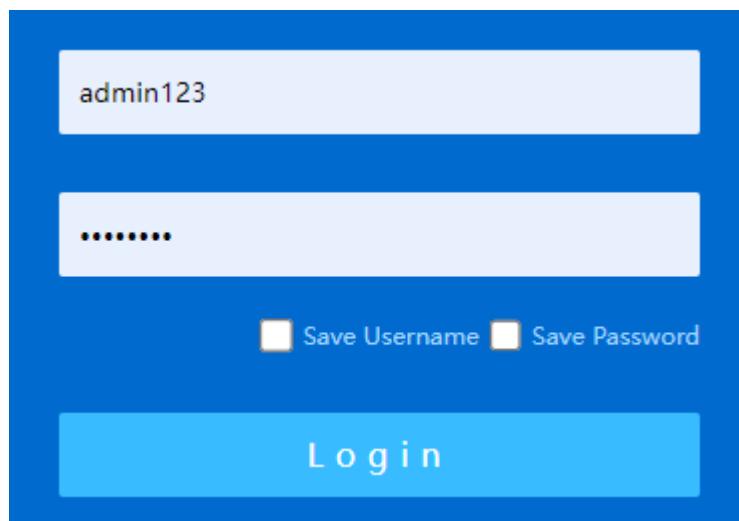

Note:

- The default username and password for the switch are "admin", which is strictly case-sensitive when typing.
- The default user password is with administrator privileges.
- WebServer will provide 3 opportunities to enter username and password. If you enter the error 3 times in succession, the browser will display "Access denied" to deny access to the information. Please refresh the page and try again.

Step 5 Click "OK".

Step 6 End.

After login successfully, user can configure relative parameters and information of WEB interface according to demands.

Note:

After logging in to the device, you can modify the IP address of the switch for ease of use.

2 System Info

Function Description

View port status such as port type and connection status.


Check device information such as product model, software and hardware version, etc.

Operation Path

Open in the navigation bar: "System Info".

Interface Description

System Info interface screenshot:

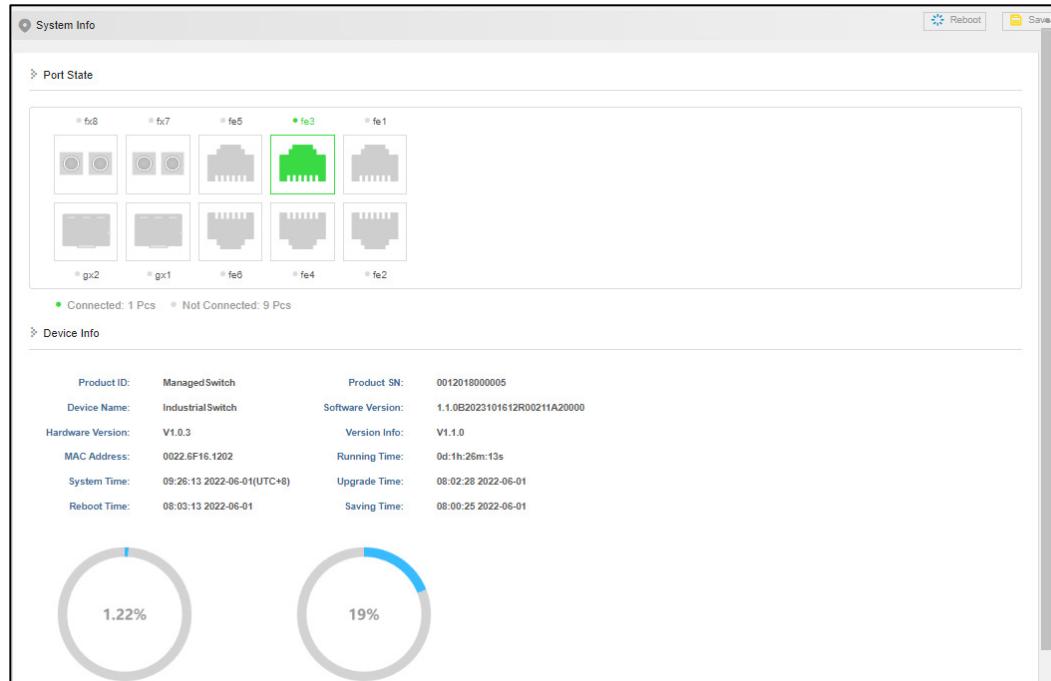

The main element configuration description of system information interface:

Interface Element	Description
Port State	<p>Display port icon and port connection status of the device:</p> <ul style="list-style-type: none"> ●  Copper port icon, grayed out indicates that the device is not connected. ●  Copper port icon, highlighting indicates that the device is connected. ●  Fiber port icon, grayed out indicates that the device is not connected. ●  Fiber port icon, highlighting indicates that the device is connected.
Device Info	<p>Basic information of software, hardware and operation of the device.</p> <ul style="list-style-type: none"> ● Product ID ● Device Name ● Hardware Version ● MAC Address ● System Time ● Reboot Time ● Product SN ● Software Version ● Version Info ● Running Time ● Upgrade Time ● Saving Time

3 Login Config

3.1 IP Address

Function Description

Configure the static or dynamic IP address.

Operation Path

Open on the navigation bar: "Login Config > IP Address".

Interface Description

Interface screenshot of IP Address Config:



The screenshot shows the 'IP Address Config' interface. At the top, there are 'Reboot' and 'Save' buttons. Below that is a description: 'Description: modify the IP mode and take effect after rebooting the device'. The configuration fields are as follows:

IP Mode	Static
IP Address	192.168.1.254/24
Gateway	192.168.1.1
DNS Mode	Static
DNS1	8.8.8.8
DNS2	0.0.0.0

At the bottom is an 'Apply' button.

The main elements configuration description of IP address configuration interface:

Interface Element	Description
IP Mode	<p>Set the IP address acquisition mode, which can be set to:</p> <ul style="list-style-type: none">• Static: System IP address configured by default or manually.• Dynamic: system automatically acquired IP address of the device.

Interface Element	Description
	<p>Note</p> <ul style="list-style-type: none"> • Default configured IP address is 192.168.1.254/24. • After modifying the IP mode, the device needs to be restarted to take effect.
IP Address	Display the IP address of the device.
Gateway	Display the gateway address of the device.
DNS Mode	<p>Set the DNS acquisition mode, which can be set to:</p> <ul style="list-style-type: none"> • Static: DNS that is either system default configuration or manually set. • Dynamic: system automatically acquired DNS of the device. <p>Note:</p> <p>The default DNS1/DNS2 configuration is 8.8.8.8/0.0.0.0.</p>
DNS1	Display device DNS1.
DNS2	Display device DNS2.

3.2 User

Function Description

Add/delete users accessing the network management system.

Operation Path

Open in the navigation bar: “Login Config” > “User”.

Interface Description

The screenshot of User interface:

	User name	Password	Privilege
<input type="checkbox"/>	admin	*****	Administrator

Each page 20 Entries Home page Previous Next Last 1 Total 1 Entries

The main element configuration description of system information interface:

Interface Element	Description
User name	<p>User name for accessing the network management system.</p> <p>Note:</p> <ul style="list-style-type: none"> • The user name is a combination of letters, numbers and symbols not more than 20 bytes. Please be case-sensitive. • Up to 5 groups of users are supported.
Password	<p>User name for accessing the network management system.</p> <p>Note:</p> <p>The password is a combination of letters, numbers and symbols not more than 20 bytes. Please be case-sensitive.</p>
Privilege	<ul style="list-style-type: none"> • Observer: The configuration information of the device can be viewed, but the configuration of the device cannot be modified. • Administrator: User has all privileges of the device, including downloading, uploading, rebooting, modifying device information and other other operations. <p>Notice:</p> <ul style="list-style-type: none"> • Users can view, delete, or add other users whose priority does not exceed their own. • If the added user name already exists, the original user information will be overwritten.



Notice

Please keep the modified login name and password in mind. If you forget it, you can restore it to factory setting via DIP switch. Default login name and password of logging in to the WEB configuration interface are “admin”.

3.3 Protocol Authorization

Function Description

Open the access security protocols Telnet and SSH for the remote login service.

The full English name of SSH is Secure Shell. SSH is the security protocol based on the application layer and transport layer. SSH is a reliable protocol which provides security for remote login sessions and other network services. Using SSH protocol can effectively prevent information leakage in the process of remote management, and can also prevent DNS and IP spoofing. In addition, the transmitted data is compressed so

that the transmission speed can be increased. After SSH function is enabled, users can enter the command line configuration interface to manage devices.

Telnet is the standard protocol and main mode of Internet remote login service. It provides users with the ability to complete the remote host work on the local computer. After the TELNET function is enabled, users can enter the command line configuration interface to manage devices.

Operation Path

Open in the navigation bar: “Login Config > Protocol Authorization”.

Interface Description

Screenshot of Protocol Authorization interface:



Configuration description of main elements of the protocol interface:

Interface Element	Description
Telnet Switch	After opening, users can access the command line configuration interface through Ethernet port.
SSH Switch	After opening, users can access the command line configuration interface through the Console port.

4 Port Config

4.1 Port Setting

Function Description


Set port parameters individually or in batches.

Operation Path

Open in order: "Main Menu > Port Config > Port Setting".

Interface Description

Port Setting interface is as follows:

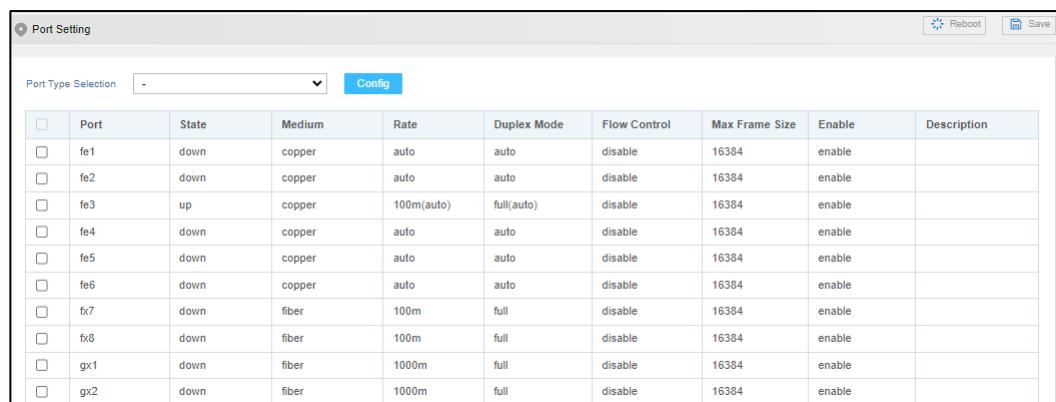

<input type="checkbox"/>	Port	State	Medium	Rate	Duplex Mode	Flow Control	Max Frame Size	Enable	Description
<input type="checkbox"/>	fe1	down	copper	auto	auto	disable	16384	enable	
<input type="checkbox"/>	fe2	down	copper	auto	auto	disable	16384	enable	
<input type="checkbox"/>	fe3	up	copper	100m(auto)	full(auto)	disable	16384	enable	
<input type="checkbox"/>	fe4	down	copper	auto	auto	disable	16384	enable	
<input type="checkbox"/>	fe5	down	copper	auto	auto	disable	16384	enable	
<input type="checkbox"/>	fe6	down	copper	auto	auto	disable	16384	enable	
<input type="checkbox"/>	fx7	down	fiber	100m	full	disable	16384	enable	
<input type="checkbox"/>	fx8	down	fiber	100m	full	disable	16384	enable	
<input type="checkbox"/>	gx1	down	fiber	1000m	full	disable	16384	enable	
<input type="checkbox"/>	gx2	down	fiber	1000m	full	disable	16384	enable	

Main elements configuration description of Port Setting interface:

Interface Element	Description
Port	The corresponding port name of the device Ethernet port.
State	Ethernet port connection status, display status as follows: <ul style="list-style-type: none">• down: represent the port is disconnected;

Interface Element	Description
	<ul style="list-style-type: none"> • up: represent the port is connected.
Medium	Ethernet port connection type, display medium as follows: <ul style="list-style-type: none"> • copper: copper port • fiber: fiber port
Rate	Ethernet port working speed, optional speed as follows: <ul style="list-style-type: none"> • auto • 10M • 100M • 1000M Note: Due to differences in the configuration of different devices, some optical ports only support configuration at maximum speed. The above options are subject to the actual support of the device.
Duplex Mode	Under current Ethernet working mode, optional mode as follows: <ul style="list-style-type: none"> • auto: auto-negotiation • full: full duplex • half: half-duplex
Flow Control	Port flow control status, options as follows: <ul style="list-style-type: none"> • disable • enable
Max Frame Size	Display the maximum data frame length that the Ethernet port transmitted.
Enable	Enable Ethernet port. Notice: If “disable” is selected, the port won’t be connected to use.
Description	Support entering port description of no more than 40 characters.

4.2 Link Aggregation

The link aggregation technology can increase link bandwidth by bundling multiple physical interfaces into one logical interface without hardware upgrade. While increasing the bandwidth, link aggregation adopts the mechanism of backup link, which can effectively improve the reliability of link between devices.

Link aggregation technology has the following three advantages:

- Increase bandwidth
The maximum bandwidth of link aggregation interface can reach the sum of the bandwidth of each member interface.
- Improve the reliability
When an active link fails, traffic can be switched to other available member links, thus improving the reliability of link aggregation interface.
- Load sharing
Within a link aggregation group, load sharing can be achieved on the active links of each member.

Function Description

Binding multiple physical ports into one logical channel.

Operation Path

Open in order: "Main Menu > Port Config > Link Aggregation".

Interface Description

Screenshot of Link Aggregation interface:

Group Name	Port Member
1	fe1,fe2

The main element configuration description of static trunking interface:

Interface Element	Description
Group Name	Aggregation group number, support two groups of ports of the same type.
Port Member	Ports that join the trunking group.



Note

- The attributes of all member ports in trunking group should be the same, including medium, rate and duplex mode, etc.
- Setting one port as both ring network port and trunking port is not supported.
- One port can only join a trunking group.

4.3 Port Speed Limit

Function Description


Single or batch limit the ingress bandwidth and egress bandwidth of broadcast, multicast and unicast received by the port.

Operation Path

Open in order: "Main menu > Port Config > Port Speed Limit".

Interface Description

Port Speed Limit interface is as follows.

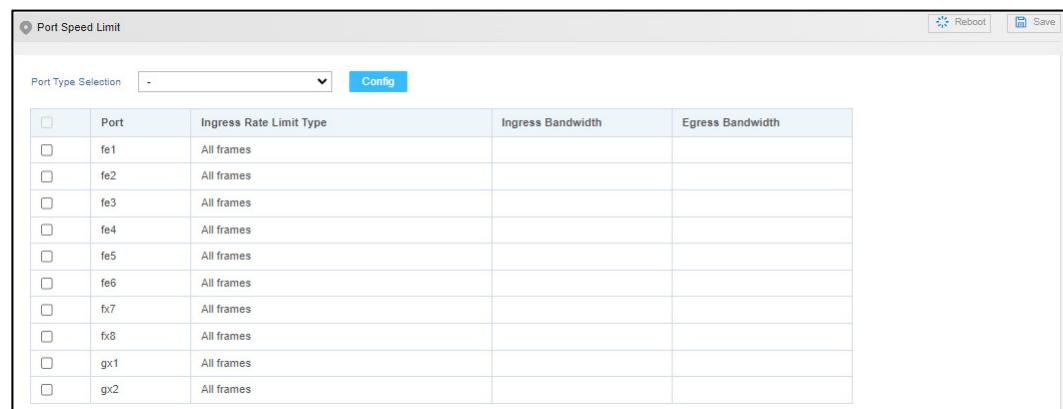

Main elements configuration description of bandwidth management interface:

Interface Element	Description
Port Type Selection	Select the port type, and check the ports of the same type in batches: <ul style="list-style-type: none"> 100M copper port (fe) Gigabit fiber port (gx)
<input checked="" type="checkbox"/>	Check box, you can check multiple ports for simultaneous configuration.
Port	Port number of the device.
Ingress Rate Limit Type	The data packets type of receiving bandwidth needs to be limited, options of drop-down list are as follows: <ul style="list-style-type: none"> All frames: all kinds of data packets; Broadcast, Multicast and flood unicast frames; Broadcast and Multicast only
Ingress Bandwidth	Limit the transmission rate of all ingress data, and select

Interface Element	Description
	<p>the rate range:</p> <ul style="list-style-type: none"> • 100M copper port: 128/256/512Kbps/1/2/4/8/16/64Mbps • Gigabit fiber port: 128/256/512Kbps/1/2/4/8/16/64Mbps/128Mbps/256Mbps/512Mbps
Egress Bandwidth	<p>Limit the transmission rate of all egress data, and select the rate range:</p> <ul style="list-style-type: none"> • 100M copper port: 128/256/512Kbps/1/2/4/8/16/64Mbps • Gigabit fiber port: 128/256/512Kbps/1/2/4/8/16/64Mbps/128Mbps/256Mbps/512Mbps



Note

Port speed limit has high requirements on network cable quality. If the cable quality is not up to the standard, lots of conflict packets and broken packet would appear.

4.4 Storm Control

Function Description

Configure the maximum broadcast, multicast or unknown unicast packet flow the port allows. When the sum of each port broadcast, unknown multicast or unknown unicast flow achieves the value user sets, the system will discard the packets beyond the broadcast, unknown multicast or unknown unicast flow limit, so that the proportion of overall broadcast, unknown multicast or unknown unicast flow can be reduced to limited range, ensuring the normal operation of network business.

Operation Path

Open in order: "Port Config > Storm Control".

Interface Description

Storm Control interface is as follows:

Port	Broadcast	Multicast	Unicast
fe1	disabled	disabled	disabled
fe2	disabled	disabled	disabled
fe3	disabled	disabled	disabled
fe4	disabled	disabled	disabled
fe5	disabled	disabled	disabled
fe6	disabled	disabled	disabled
fx7	disabled	disabled	disabled
fx8	disabled	disabled	disabled
gx1	disabled	disabled	disabled
gx2	disabled	disabled	disabled

Main elements configuration description of storm suppression interface:

Interface Element	Description
Period Configuration	<p>The detection period of different bandwidth ports for broadcasting, unknown multicast or unknown unicast can be selected as follows:</p> <ul style="list-style-type: none"> • 200us (1G) / 2ms (100M) / 20ms (10M) • 1ms (1G) / 10ms (100M) / 100ms (10M) • 10ms (1G) / 10ms (100M) / 10ms (10M) • 100ms (1G) / 100ms (100M) / 100ms (10M)
Threshold Configuration	<p>The limit number of detected broadcasts, unknown multicasts or unknown unicasts in a specified period, with a value range of 1-255; When the storm suppression threshold is exceeded, the exceeded message will be discarded.</p>
Port	Switch port number.
Broadcast	<p>Enabled state of broadcast suppression.</p> <ul style="list-style-type: none"> • enabled

Interface Element	Description
	<ul style="list-style-type: none"> disabled
Multicast	Enabled state of unknown multicast suppression. <ul style="list-style-type: none"> enabled disabled
Unicast	Enabled state of unknown unicast suppression. <ul style="list-style-type: none"> enabled disabled

4.5 Port Mirroring

Function Description

Copy the data from the source port to the appointed port for analysis and monitoring.

Operation Path

Open in order: "Port Config > Port Mirroring".

Interface Description

Port Mirroring interface is as follows:

	Session ID	Source Port	Destination Port
<input type="checkbox"/>	1	fe1(tx),fe2(tx)	fe4

The main element configuration description of Port Mirroring interface:

Interface Element	Description
Session ID	Device mirror ID number, value is 1. Note: Support only 1 mirror session. If mirroring is configured multiple times, only the data of the last configuration will be retained.
Source Port	Monitored ports, from which the device will collect input or output messages. There can be one or more mirror ports.
Destination Port	Monitoring port, used to copy and analyze messages from

Interface Element	Description
	source port.
Add	<p>Click “Add” to reconfigure the mirror and configure the data direction of the mirror.</p> <p>Data direction options are as follows:</p> <ul style="list-style-type: none">• Send: egress data, the message sent by the source port will be mirrored to the destination port;• Receive: ingress data, the message received by the source port will be mirrored to the destination port;• Bidirectional: all data, mirror the source port receiving and sending packets at the same time.

4.6 Port Statistics

4.6.1 Port Statistics-Overview

Function Description

Check the data information of each port:

- Number of messages sent and received and number of message bytes
- Number of dropped and error messages

Operation Path

Open in order: "Port Config > Port statistics > Port Statistics-Overview".

Interface Description

Port Statistics-Overview interface is as follows:

The screenshot shows a table with the following data:

Port	Received Packets	Sent Packets	Received Bytes	Sent Bytes	Received Drop	Sent Drop	Received Error	Sent Error
fe1	0	0	0	0	0	0	0	0
fe2	0	0	0	0	0	0	0	0
fe3	13904	13317	3657671	5539000	0	0	0	0
fe4	0	0	0	0	0	0	0	0
fe5	0	0	0	0	0	0	0	0
fe6	0	0	0	0	0	0	0	0
fx7	0	28	0	2667	0	0	0	0
fx8	0	0	0	0	0	0	0	0
gx1	0	0	0	0	0	0	0	0
gx2	0	0	0	0	0	0	0	0

4.6.2 Port Statistics-Port

Function Description


Check the classification statistics of the total number of messages sent and received by the designated port and the number of bytes of messages.

Operation Path

Open in order: "Port Config > Port Statistics > Port Statistics-Port".

Interface Description

Port Statistics-Port interface is as follows:

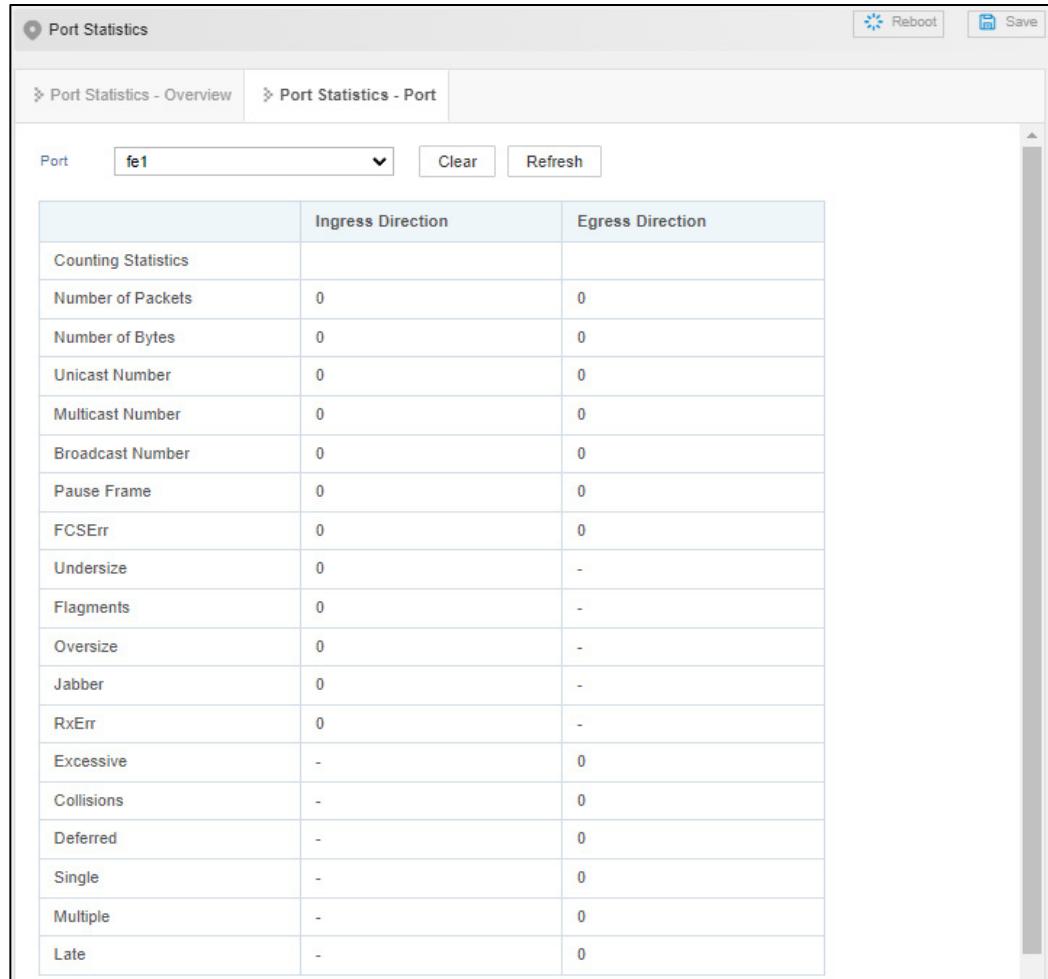

The screenshot shows the 'Port Statistics' interface for port 'fe1'. The interface includes a header with 'Port Statistics' and buttons for 'Reboot' and 'Save'. Below the header, there are two tabs: 'Port Statistics - Overview' (selected) and 'Port Statistics - Port'. A dropdown menu shows 'fe1' is selected. Below the tabs are buttons for 'Clear' and 'Refresh'. The main area is a table with two columns: 'Ingress Direction' and 'Egress Direction'. The table lists various statistics for port fe1, with values mostly at 0 or '-'.

	Ingress Direction	Egress Direction
Counting Statistics		
Number of Packets	0	0
Number of Bytes	0	0
Unicast Number	0	0
Multicast Number	0	0
Broadcast Number	0	0
Pause Frame	0	0
FCSErr	0	0
Undersize	0	-
Flagments	0	-
Oversize	0	-
Jabber	0	-
RxErr	0	-
Excessive	-	0
Collisions	-	0
Deferred	-	0
Single	-	0
Multiple	-	0
Late	-	0

5 Layer-2 Config

5.1 VLAN

VLAN (Virtual Local Area Network) is a communication technology that logically divides a physical LAN into multiple broadcast domains. Hosts in VLAN can directly communicate with each other, but two VLAN can't directly communicate with each other, which can limit the broadcast message in a VLAN. Using VLAN can bring following benefits to users.


- Limit the broadcast domain;
- Increase the security of LAN;
- Improve the network stability;
- Flexibly construct virtual working team.

Port-based VLAN

Port-based VLAN adopts different identifications to distinguish different VLAN. Adopting the same ID identification will cause internal member groups being replaced, new ID identification will establish new forwarding rules, and all ports must belong to one or more VLAN.

IEEE802.1Q VLAN

Under the provisions of IEEE 802.1Q protocol, the device can add 4 bytes VLAN tag (Tag for short) between Source address and Length/Type fields of Ethernet data frame, identifying the VLAN information. As the picture below.

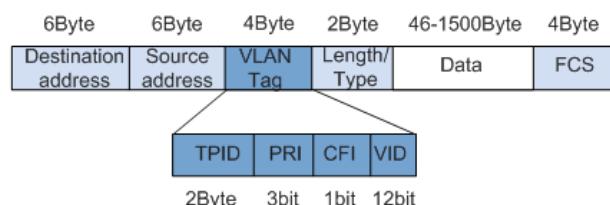

- TPID: Tag Protocol Identifier represents the data frame type, when the value is 0x8100, it represents the VLAN data frame of IEEE 802.1Q.
- PRI: Priority represents the 802.1p priority of data frame. The value ranges from 0 to 7. A larger value indicates a higher priority. During network congestion, the switch will preferentially send data frame with higher priority.
- CFI: Canonical Format Indicator represents whether MAC address is packaged in standard format in different transmission media. 0 represents that MAC address is packaged in standard format.
- VID: VLAN ID represents the VLAN number of the data frame. The value range of VLAN ID is 0-4095. 0 and 4095 are reserved values of the protocol, so the valid value range of VLAN ID is 1-4094.

5.1.1 Global Config

Function Description

Global Configuration could realize:

- Set VLAN type
- Set the PVID of CUP
- Set the default PVID of the port
- Set port type

Operation Path

Open in order: "Layer-2 Config > VLAN > Global Config".

Interface Description 1: Port-based VLAN

Port-based VLAN interface is as follows:



Interface Description: IEE 802.1Q VLAN

Interface screenshot of IEE 802.1Q VLAN:

Port Member	PVID	Member Type
cpu	1	trunk
fe1	1	access
fe2	1	access
fe3	1	access
fe4	1	access
fe5	1	access
fe6	1	access
fx7	1	access
fx8	1	access
gx1	1	access
gx2	1	access

The main element configuration description of Global Config interface:

Interface Element	Description
VLAN Type	VLAN can be configured in two types: <ul style="list-style-type: none"> Port-based VLAN IEE 802.1Q VLAN
PVID Config of CPU Port	The default configuration is 1, and the optional range is 1-4094.
Default Port PVID Config	The default configuration is 1, and the optional range is 1-4094.
Port Type	Configure the link type of port, there are two types as follows: <ul style="list-style-type: none"> Access: The message entering the switch from the Access port, which is forced to use the PVID of the port as the VLAN ID. Trunk: the message entering the switch from

Interface Element	Description
	Trunk port. If there is already a VLAN TAG, use the VLAN ID in the VLAN TAG of the message; Otherwise, use the PVID of this port as VLAN ID.
Port List	Device port number check box to configure the port type of the selected port in batch.

5.1.2 VLAN Config

Function Description

Add VLAN based on port or 802.1Q.

Operation Path

Open in order: "Layer-2 Config > VLAN > VLAN Config".

Interface Description: View VLAN Configuration

View port-based VLAN interface screenshot:

	VID	Port Member
<input type="checkbox"/>	1	UnTagged: (cpu, fe1, fe2, fe3, fe4, fe5, fe6, fx7, fx8, gx1, gx2)

Interface Description: Add Port-based VLAN

Group Name	2
Port List	<input checked="" type="checkbox"/> fe1 <input checked="" type="checkbox"/> fe2 <input checked="" type="checkbox"/> fe3 <input type="checkbox"/> fe4 <input type="checkbox"/> fe5 <input type="checkbox"/> fe6 <input type="checkbox"/> fx7 <input type="checkbox"/> fx8 <input type="checkbox"/> gx1 <input type="checkbox"/> gx2
<input type="button" value="Confirm"/>	

Interface Description: Add 802.1Q-based VLAN

The dialog box has the following fields:

- 802.1Q VID: 2
- Member Type: Tagged
- CPU: Tagged
- Port List:
 - fe1 (checked)
 - fe2 (unchecked)
 - fe3 (unchecked)
 - fe4 (checked)
 - fe5 (unchecked)
 - fe6 (unchecked)
 - fx7 (unchecked)
 - fx8 (unchecked)
 - gx1 (checked)
 - gx2 (unchecked)

Confirm

The main element configuration description of Add 802.1Q-based VLAN interface:

Interface Element	Description
802.1Q VID	<p>Enter the ID to add the VLAN.</p> <p>Note: If the VLAN ID already exists, the original VLAN ID configuration will be overwritten after saving.</p>
Member Type	<p>There are three types of “VLAN ID” for data frames sent out by the port:</p> <ul style="list-style-type: none"> • Unmodified: when the data frame is sent out from the port, it will recover the “VLAN ID” of accessing to the switch. • Untagged: remove the “VLAN ID” fields when the data frame is sent out from the port, • Tagged: reserve “VLAN ID” fields when the data frame is sent out from the port.
CPU	<p>There are three types of “VLAN ID” for data frames sent out by CPU:</p> <ul style="list-style-type: none"> • Unmodified: when the data frame is sent to CPU, it will recover the “VLAN ID” of accessing to the switch. • Untagged: remove the “VLAN ID” fields when the data frame is sent to CPU, • Tagged: reserve “VLAN ID” fields when the data frame is sent to CPU.
Port List	The device port number check box can be used to configure

Interface Element	Description
	the port type of the selected port in batch.

5.2 MAC Configuration

MAC (Media Access Control) address is the hardware identity of network device; the switch forwards the message according to MAC address. MAC address has uniqueness, which has guaranteed the correct retransmission of message. Each switch is maintaining a MAC address table. In the table, MAC address is corresponding to the switch port. When the switch receives data frames, it decides whether to filter them or forward them to the corresponding port according to the MAC address table. MAC address is the foundation and premise that switch achieves fast forwarding.

5.2.1 MAC Address Table

Each port in the switch is equipped with automatic address learning function, it stores the frame source address (source MAC address, switch port number) that port sends and receives in the address table. Ageing time is a parameter influencing the switch learning process; the default value is 300 seconds. When the timekeeping starts after an address record is added to the address table, if each port doesn't receive the frame whose source address is the MAC address within the ageing time, then these addresses will be deleted from dynamic forwarding address table (source MAC address, destination MAC address and their corresponding switch port number).

Function Description

View the MAC address, including:

- The data source MAC of the access device learned by the device
- Static unicast MAC

Operation Path

Open in order: "Layer-2 Config > MAC Config > MAC Address Table".

Interface Description

MAC Address Table interface is as follows:

MAC	Port	Type
68DD.B709.993E	fe3	dynamic

Each page 20 Entries Home page Previous Next Last 1 Total 1 Entries

Main elements configuration description of MAC Address Table interface:

Interface Element	Description
MAC	The dynamic MAC that the device have learned or the static unicast or multicast MAC that user has configured.
Port	Access the port number of the source data of the corresponding MAC address.
Type	The type of MAC address, it displays as follows: <ul style="list-style-type: none"> dynamic: dynamic MAC address; static: static MAC address.

5.2.2 Static MAC

Function Description

Support manual binding of unicast MAC addresses. The unicast address after binding is static MAC, which will not age.

Operation Path

Open in order: "Layer-2 Config > MAC > Static Mac".

Interface Description

Static MAC interface is as follows:

MAC	Port
0001.0001.0001	fe1

The main element configuration description of Static MAC interface:

Interface Element	Description
MAC	Fill in the unicast MAC address that needs to bind the interface, such as 0001.0001.0001.
Port	The Binding Port Number.



Note

- The function is a sort of security mechanism, please carefully confirm the setting, otherwise, part of the devices won't be able to communicate;
- Please don't adopt multicast address as the entering address;
- Please don't enter reserved MAC address, such as the local MAC address.

5.3 Spanning-tree



Notice

Spanning tree and Ring cannot be enabled at the same time. Please disable the enable switch of the Ring before setting the spanning tree.

Spanning-tree protocol is a sort of layer 2 management protocol; it can eliminate the network layer 2 circuit via selectively obstructing the network redundant links. At the same time, it has link backup function. Here are three kinds of spanning-tree protocols:

- STP (Spanning Tree Protocol)
- RSTP (Rapid Spanning Tree Protocol);

Spanning-tree protocol has two main functions:

- First function is utilizing spanning-tree algorithm to establish a spanning-tree that takes a port of a switch as the root to avoid ring circuit in Ethernet.
- Second function is achieving the convergence protection purpose via spanning-tree protocol when Ethernet topology changes.

5.3.1 Global Config

Function Description

On the "Global Config" page, user can configure relative parameters of spanning-tree.

Operation Path

Open in order: "Layer-2 Config > Spanning-tree > Global Config".

Interface Description

Global Config interface is as follows:

The screenshot shows the 'Spanning-tree Config' interface with the 'Global Config' tab selected. The interface includes the following fields:

- Enable: A toggle switch that is turned on.
- Priority: A text input field containing '32768'.
- Forwarding Delay: A text input field containing '15'.
- Aging Time: A text input field containing '20'.
- Handshake Time: A text input field containing '2'.
- STP Version: A text input field containing '0'.

At the bottom of the interface is a blue 'Apply' button. At the top right are 'Reboot' and 'Save' buttons.

The main element configuration description of Global Config interface:

Interface Element	Description
Enable	Spanning-tree enable switch. Disable by default
Priority	Bridge priority level, defaults to 32768, value range is 0-61440. Note: The lower the priority value, the higher the priority.
Forwarding Delay	Port state transition delay, defaults to 15S, the value range

Interface Element	Description
	is 4-30.
Aging Time	The maximum lifetime of the message in the device, defaults to 20S, the value range is 6-40. It's used to determine whether the configuration message times out.
Handshake Time	Message sending cycle, defaults to 2S, the value range is 1-10. Note: The spanning tree protocol sends configuration information every Hello time to check whether the link is faulty.
STP Version	STP revision level, defaults to 0, the value range is 0-1. <ul style="list-style-type: none"> 0 means STP Spanning Tree Protocol. 1 means RSTP (Rapid Spanning Tree Protocol)

5.3.2 Port Config

Function Description

On the "Port Configuration" page, users can enable ports to participate in spanning tree and configure port connection type, path cost, priority and other attributes.

Operation Path

Open in order: "Layer-2 Config > Spanning-tree > Port Config".

Interface Description

Check Port Config interface is as below:

Spanning-tree Config						
Global Config		Port Config		Spanning Tree State Information		
Config						
□	Port	Enable	Edge Port	Connection Type	Priority	Config Cost
□	fe1	disable	disable	point-to-point	0	200000000
□	fe2	disable	disable	point-to-point	0	200000000
□	fe3	disable	disable	point-to-point	0	200000000
□	fe4	disable	disable	point-to-point	0	200000000
□	fe5	disable	disable	point-to-point	0	200000000
□	fe6	disable	disable	point-to-point	0	200000000
□	fx7	disable	disable	point-to-point	0	200000000
□	fx8	disable	disable	point-to-point	0	200000000
□	gx1	disable	disable	point-to-point	0	200000000
□	gx2	disable	disable	point-to-point	0	200000000

The main element configuration description of Port Config interface:

Interface Element	Description
Port	The corresponding port name of the device Ethernet port.
Enable	Status of participating in spanning tree enable switch.
Edge Port	Remote port enable switch: <ul style="list-style-type: none"> enable: participate in spanning-tree; disable: not participate in spanning-tree.
Connection Type	Select port link type: <ul style="list-style-type: none"> auto: Automatic system detection point-to-point: Point-to-point link is the connection between switches. shared: Non-point-to-point link is the connection between switch and hub.
Priority	Port priority, optional values are: 0/16/32/48/64/80/96/112/128/144/160/176/192/208/224/240. Note: Port priority level in bridge, port priority level is higher when the value is smaller. The higher the priority of the port, the more likely it is to be a root port.
Config Cost	The path cost from network bridge to root bridge, defaults to 200000000. Value range: 1-200000000.

5.3.3 Spanning Tree State Information

Function Description

Display information about the root switch and this switch in the spanning tree.

Operation Path

Open in order: "Layer-2 Config > Spanning-tree > Spanning Tree State Information".

Interface Description

The Spanning Tree State Information interface is as follows:

Port Number	Priority	Path Overhead	Point-to-Point Network	Edge Port	Connected Network	Port Role	Forwarding Status
1	0	0	Y	N	Rapid	Disabled	Disabled
2	0	0	Y	N	Rapid	Disabled	Disabled
3	0	0	Y	N	Rapid	Disabled	Disabled
4	0	0	Y	N	Rapid	Disabled	Disabled
5	0	0	Y	N	Rapid	Disabled	Disabled
6	0	0	Y	N	Rapid	Disabled	Disabled
7	0	0	Y	N	Rapid	Disabled	Disabled
8	0	0	Y	N	Rapid	Disabled	Disabled
9	0	0	Y	N	Rapid	Disabled	Disabled
10	0	0	Y	N	Rapid	Disabled	Disabled

The main element configuration description of Spanning Tree State Information interface:

Interface Element	Description
Local Switch ID	It displays the priority of this switch and MAC address information ID.
Root Switch ID	It displays the priority of the root switch and MAC address information ID.

Root Port Number	The port of the switch, which is not in the root bridge but nearest to it, is in charge of communicating with the root bridge. The path cost from this port to the root bridge is the lowest. When the path costs of multiple ports are the same, the one with the highest priority would be the root port.
Root Port Path Cost	The root cost of a switch is the sum of root port cost and the root cost that data packet goes through all switches. The root cost of root bridge is zero.
Port Number	Display the device port number.
Priority	The priority of ports in network bridge. The values range from 0 to 240. The smaller the value, the higher the port priority. The higher the priority, the more likely it is to be a root port.
Path Overhead	The path cost from network bridge to root bridge.
Point-to-Point Network	The directly connected switch port.
Edge Port	The port that directly connects to terminal instead of other switches.
Connected Network	It displays the network protocol of devices with connected ports.
Port Role	Root port, specified port, Alternate port and Backup port.
Forwarding Status	<p>It is divided by whether the port forwards user flow and learns MAC address.</p> <ul style="list-style-type: none"> Discarding: neither forward user flow nor learn MAC address; Learning: doesn't forward user flow but learn MAC address; Forwarding: forward user flow and learn MAC address; Listening: neither forward user flow nor learn MAC address; but can receive and send configuration message; Blocking: port only receives and processes BPDU, doesn't forward user flow; Disabled: blocked or physically disconnected.

5.4 Ring



Notice

Spanning tree and Ring cannot be enabled at the same time. Please disable the enable switch of spanning tree before setting the Ring.

Ring is an Ethernet Ring network algorithm developed and designed by the company for highly reliable industrial control network applications that require link redundancy backup. Features in Ethernet link redundancy, fast automatic recovery. Ring adopts no master station design. In a multi-ring network of up to 250 switches, the network self-recovery time is less than 20 milliseconds. Each port in this series of switches can be used as a ring port and connected with other switches. When an interruption occurs in the network connection, the SW-Ring redundant mechanism enables the backup link to quickly recover the network communication.

Function Description


Quickly configure Ring network.

Operation Path

Open in order: "Layer-2 Config > Ring".

Interface Description

Ring interface is as follows:

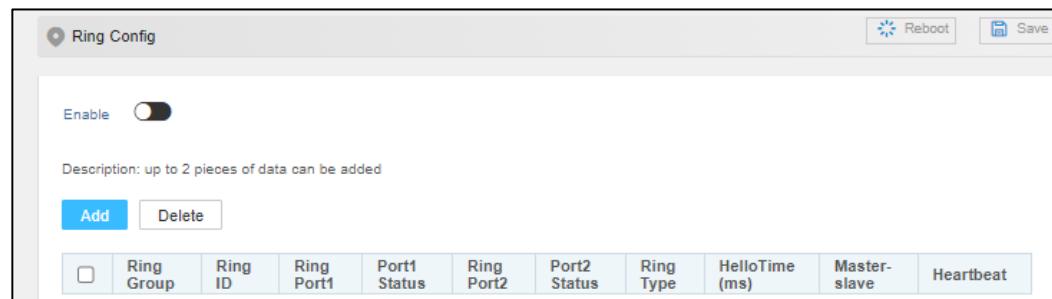

The main element configuration description of Ring interface:

Interface Element	Description
Enable	Enable switch, slide to the right to enable the Ring ring network

Interface Element	Description
	function.
Ring Group	Support ring group 1/2, it can create 2 ring networks at the same time.
Ring ID	When multiple switches form a ring, the current ring ID would be network ID. Different ring network has different ID. Value range is 1-255. Note: The ring network identification must remain the same in one ring network.
Ring Port1	The network port 1 on the switch device used to form the ring network. Note: When the ring network type is "Couple", port 1 is the "Coupled Port". Coupling port is the port that connects different network identities.
Port1 Status	The current state of Port 1. <ul style="list-style-type: none"> block forward
Ring Port2	Port 2 can be used for the formation of ring network in switch. Note: <ul style="list-style-type: none"> When the ring network type is "Couple", port 2 is the "console port". Console port is the port in the chain where two rings intersect. "Port 1" and "Port 2" cannot be set to the same port, and the port number it sets must be the same as it actually connects without sequential order;
Port2 Status	The current state of Port 2. <ul style="list-style-type: none"> block forward
Ring Type	According to the requirement in the scene, user can choose different ring type. <ul style="list-style-type: none"> Single: single ring, using a continuous ring to connect all device together. Couple: couple ring is a redundant structure used for connecting two independent networks. Chain: chain can enhance user's flexibility in constructing all types of redundant network topology via an advanced software technology. Dual: Two adjacent rings share a switch; users can carry the same switch on two different networks or two different switching devices on the same network.

Interface Element	Description
Hello Time (ms)	<p>Hello_time is the sending time interval of Hello packet; via the ring port, CPU sends query packet to adjacent device for confirming the connection is normal or not. Input range is 0~100.</p> <p>Note: When the Hello Time value is 0, it means that no inquiry packet is sent.</p>
Master-slave	<p>Single loop network supports no-master station structure and one-master multi-slave structure.</p> <ul style="list-style-type: none"> When all the single-loop devices are slave stations, the single-loop structure is no-master station. When a single ring device is a master and multiple slave station, one device can be designated as the master device and the other devices as the slave device. One end of the main device of the ring network is the backup link. When the ring network fails, the backup link is enabled from the master station to ensure the normal operation of the network.
Heartbeat	<p>Heartbeat detection mechanism. When this configuration is enabled, the network association will periodically send heartbeat messages to detect whether the corresponding devices are in live state, thus enhancing the reliability of the network. Configurable:</p> <ul style="list-style-type: none"> Enable Disable




Notice

- The port that has been set to port trunking could not be set as rapid ring port. One port can't belong to multiple ring networks.
- The ID in the same single ring must be the same; otherwise it cannot form a ring and achieve normal communication.
- To ensure the communication of ring network, it's recommended to set the "Type" of ports that have already been set as ring network to "Trunk" and "member relationship" to "Tagged".
- When forming complicated ring networks like tangent ring, please make sure the ID conforms to the unity of single ring network ID. Network ID of different single ring must be different.

5.4.1 Instance: Create Single Ring

For example: create the following single ring:

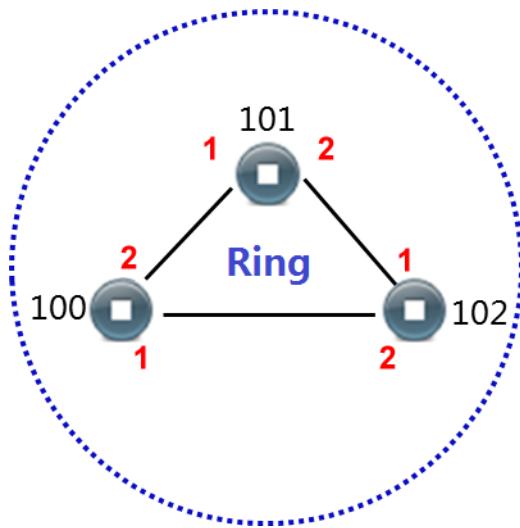

Instance Analysis

The ring ports of Device 100, 101, and 102 are port 1 and port 2. Therefore, creating single ring is viable. Port 1 and port 2 are set as the ring ports of each device.

Operation Steps

Configuring Device 100, 101 and 102 in the following steps:

Step 1 Select “Layer-2 Config > Ring”.

Step 2 Turn on the “Enable”.

Step 3 Enter “1” into the “ID” textbox of “Group 1”.

Ring Group	Ring ID	Ring Port1	Port1 Status	Ring Port2	Port2 Status	Ring Type	HelloTime (ms)	Master-slave	Heartbeat
1	1	fe1	forward	fe2	block	single	0	slave	disable

Step 4 Set “Port 1” as “fe1” and “Port 2” as “fe2” separately.

Note:

“Port 1” and “Port 2” cannot be set to the same port.

Step 5 Choose “Single” in the drop-down list of “Type” of “Group 1”.

Step 6 Enter “0” into the “HelloTime” textbox of “Group 1”.

Step 7 (For Device 100 and 101) Choose “Slave” in the drop-down list of “Master-slave” of “Group 1”.

Step 8 (For Device 102) Choose “Master” in the drop-down list of “Master-slave” of “Group 1”.

Step 9 Click “OK”.

Step 10 End.

5.5 IGMP-Snooping Config

IGMP Snooping (Internet Group Management Protocol Snooping) is a kind of IPv4 layer-2 multicast protocol. It maintains the outgoing information of multicast messages by snooping the multicast protocol messages transmitted between layer 3 multicast device and user host, so as to manage and control the forwarding of multicast data messages in data link layer.

After configuring IGMP Snooping, layer 2 multicast device can snoop and analyze the IGMP message between multicast user and upstream router, and create layer 2 multicast forwarding entries based on these information to control multicast data message forwarding. This prevents multicast data from being broadcast in the layer 2 network.

The ways of IGMP Snooping processing different messages:

- IGMP universal group query message: IGMP universal group query message is sent periodically to all hosts and routers in the local network segment to query which multicast group members are in the network segment.
- IGMP report message: the member receives the IGMP universal group query message and responds by the IGMP report message. The member actively sends an IGMP report message to the IGMP query to declare joining the multicast group.
- IGMP leave message: a member running IGMPv2 sends an IGMP leave message to notify the IGMP query that it has left a multicast group.

5.5.1 Global Config

Function Description


Enable/disable IGMP Snooping.

Operation Path

Open in order: "Layer-2 Config > IGMP-Snooping > Global Config".

Interface Description

Global Config interface is as follows:

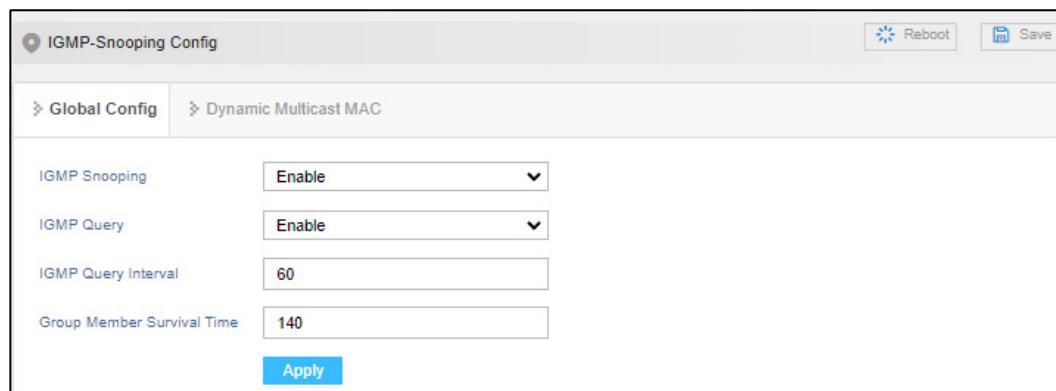

The screenshot shows the 'IGMP-Snooping Config' interface with the 'Global Config' tab selected. It includes fields for IGMP Snooping (Enable/Disable), IGMP Query (Enable/Disable), IGMP Query Interval (60), and Group Member Survival Time (140). Buttons for 'Apply' and 'Save' are at the bottom, and 'Reboot' is in the top right.

The main element configuration description of IGMP Snooping interface:

Interface Element	Description
IGMP Snooping	<p>The switch of IGMP snooping function, options are:</p> <ul style="list-style-type: none">• Enable;• Disable. <p>Note: IGMP snooping means snooping the messages between user host and router, as well as tracking multicast information and the ports that have been applied for.</p>
IGMP Query	<p>The switch of IGMP query, options are:</p> <ul style="list-style-type: none">• Enable;• Disable. <p>Note: IGMP query means that router inquiring all hosts in subnet if they join some multicast groups.</p>
IGMP Query interval	IGMP query interval, unit: second. Note:

	The time range that can be entered is 60~300s.
Group Member Survival Time	<p>The maximum time that multicast members in device can survive from existence to not receiving any response. Unit: second.</p> <p>Note:</p> <ul style="list-style-type: none">IGMP snooping needs to be enabled before using this function.The time range of group survival that can be set is 140-8960s.



Note

- You need to set multicast source and port in one VLAN first to enable IGMP Snooping function.
- Multiple IGMP inquirers should be avoided in network lest cause waste of resources. Please choose all ports if the forwarding relationship of unknown multicast group is uncertain.

5.5.2 Dynamic Multicast MAC

Function Description


Display the dynamic multicast information received by the device interface.

Operation Path

Open in order: "IGMP-Snooping Config > Dynamic Multicast MAC".

Interface Description

The Dynamic Multicast MAC interface is as follows:

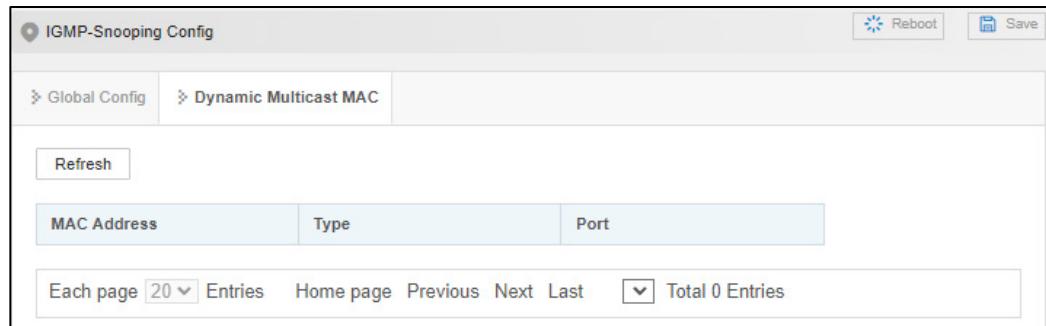

Main element configuration description of Dynamic Multicast MAC interface:

Interface Element	Description
MAC Address	The multicast address received by the interface.
Type	Multicast type: • dynamic • static
Port	Ethernet port.

5.6 Port Loop Detection

Function Description


Loop protection can be configured to avoid ring network storm.

Operation Path

Open in order: "Layer-2 Config > Port Loop Detection".

Interface Description

Screenshot of Port Loop Detection interface:

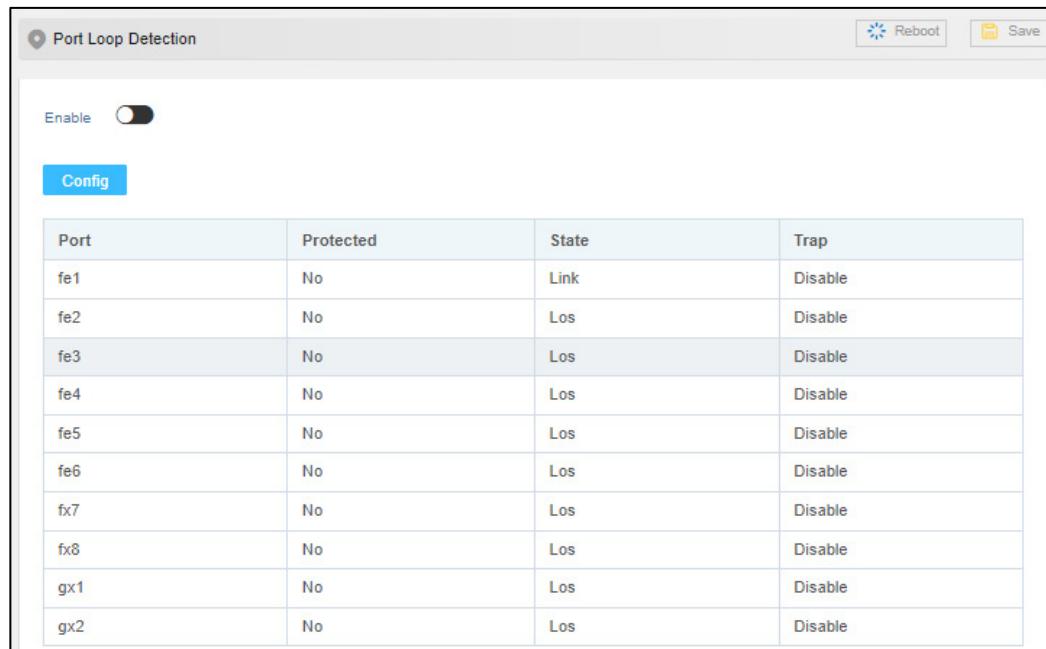

Main elements configuration descriptions of Port Loop Detection interface:

Interface Element	Description
Enable	Enable or disable port loop detection.
Port	Display the port number of the device.
Protected	<p>The state of the port protected by a loop. After enabled, when there is a port self-loop or a port loop, the loop can be quickly disconnected, and the port status can be set to blocking or forwarding to avoid network storms.</p> <p>Notice:</p> <p>The loop port cannot be set as a loop detection port.</p>
State	<p>The connection status of this port, values are:</p> <ul style="list-style-type: none"> • Los: the port is physically disconnected • Link: The port is not looped and the port is connected. • Block: The port is enabled with loop protection function, and the loop has been detected, so it has entered the protection state. • Forward: The port is connected, loop protection is enabled and no loop is detected.
Trap	<p>The Trap switch is used to send or not send Trap information when the port loop is detected. The options are:</p> <ul style="list-style-type: none"> • Enable • Disable

6 Network Config

6.1 SNMP

Now, the broadest network management protocol in network is SNMP (Simple Network Management Protocol). SNMP is the industrial standard that is widely accepted and comes into use, it's used for guaranteeing the management information transmission between two points in network, and is convenient for network manager search information, modify information, locate faults, complete fault diagnosis, conduct capacity plan and generate a report. SNMP adopts polling mechanism and only provides the most basic function library, especially suit for using in minitype, rapid and low price environment. SNMP implementation is based on connectionless transmission layer protocol UDP, therefore, it can achieve barrier - free connection to many other products.

6.1.1 View

Function Description

Add/delete SNMP view.

Operation Path

Open in order: “Network Config > SNMP > View”.

Interface Description

View interface is as below:

<input type="checkbox"/>	Name	OID	Mode
<input type="checkbox"/>	system	1	included

The main element configuration description of View interface:

Interface Element	Description
Name	SNMP view name definition, support 32 characters input including a-z and 0-9.
OID	<p>Node location information of MIB tree where the device resides.</p> <p>Note:</p> <ul style="list-style-type: none"> OID object identifier, a component node of MIB, uniquely identified by a string of numbers that represent the path. The information of OID could be viewed via the third-party software MG-SOFT MIB Browser.
Mode	<p>Node OID dealing method, options as below:</p> <ul style="list-style-type: none"> included: It contains all objects under the node subtree; excluded: Eliminate all objects beyond the node subtree.

6.1.2 Community

Function Description

Add SNMP community, and define MIB view that community can access, set MIB object access privilege of community as write privilege or read privilege.

Operation Path

Open in order: "Network Config > SNMP > Community".

Interface Description

Community interface is as below:

The main element configuration description of Community interface:

Interface Element	Description
Name	Group name, including numbers or letters, with a length of no more than 32 characters.
View Name	SNMP view name definition, which has been configured in the View page.
Read-write Type	Read-write privilege view name selection, options:. <ul style="list-style-type: none"> • read-only • read-write

6.1.3 SNMP Group

Function Description

Configure a new SNMP group and set the secure mode and corresponding SNMP view of the SNMP group.

Operation Path

Open in order: “Network Config > SNMP > SNMP Group”.

Interface Description

SNMP Group interface is as follows:

Main elements configuration description of SNMP Group interface:

Interface Element	Description
Name	SNMP group name, ranging from 1 to 32 bytes.
Encryption Mode	Whether to authenticate and encrypt the message, values: <ul style="list-style-type: none"> noauth: indicates that the message is neither authenticated nor encrypted; auth: indicates that the message is authenticated but not encrypted; priv: indicates that the message is authenticated and encrypted.
Read View	Specify the read view of the group. Note: The view must be configured in the View interface.
Write View	Specify the write and read view of the group Note: The view can be matched or not. To configure, the view must be configured by the View interface.
Notification View	Specify the notification view of the group. Note: The view can be matched or not. To configure, the view must be the view configured in the View interface.

6.1.4 V3 User

Function Description

SNMPv3 adopts User-Based Security Model (USM) authentication mechanism. Network manager can configure authentication and encryption function. Authentication is used to verify the validity of the packet sender and prevent unauthorized users from accessing it. Encryption encrypts the transmission packet between NMS and Agent to

prevent eavesdropping. It adopts authentication and encryption function to provide higher security for the communication between NMS and Agent.

Operation Path

Open in order: "Network Config > SNMP > V3 User".

Interface Description

V3 User interface is as follows:

The main element configuration description of V3 User interface:

Interface Element	Description
Username	SNMP v3 user name definition, can only contain numbers, letters, or @_! , no longer than 32 characters.
Group Name	Group name, ranging from 1 to 32 bytes. Note: Group name must be created snmp group, and only created group can create SNMP v3 users.
Security Mode	Whether to authenticate and encrypt the message, values: <ul style="list-style-type: none"> auth: indicates that the message is authenticated but not encrypted; noauth: indicates that the message is neither authenticated nor encrypted; priv: indicates that the message is authenticated and encrypted.
Authentication Mode	Authentication mode type, acceptable value: <ul style="list-style-type: none"> MD5: Information abstract algorithm 5; SHA: Secure hash algorithm.
Encryption Mode	V3 user data encryption algorithm, options as follows: <ul style="list-style-type: none"> Des: Adopt data encryption algorithm; Aes: Adopt advanced encryption standard.

V3 User: “Add” Interface Description

The screenshot shows a configuration interface for adding a V3 user. The fields are as follows:

- Username: test
- Group Name: 1
- Auth Enable: Enable
- Auth Information: md5
- Auth Password: 12345678
- Priv Enable: Enable
- Encryption Information: des
- Encryption Password: 12345678

A blue 'Confirm' button is located at the bottom right of the form.

The main element configuration description of V3 User “Add” interface:

Interface Element	Description
Username	SNMP v3 user name definition, can only contain numbers, letters, or @_! , no longer than 32 characters.
Group Name	The drop-down list of SNMP group name.
Auth Enable	Indicate that security mode requires authentication. If “disable” is selected, the default is no authentication, no encryption mode.
Auth Information	Authentication information type, acceptable values: <ul style="list-style-type: none"> md5: Information abstract algorithm 5; sha: Secure hash algorithm.
Authentication Password	Authentication password, character string, length greater than or equal to 8 bytes.
Priv Enable	Indicate that security mode requires encryption.
Encryption Information	V3 user data encryption algorithm, options as follows: <ul style="list-style-type: none"> Des: Adopt data encryption algorithm; Aes: Adopt advanced encryption standard.
Encryption Password	Encrypted password, character string, length greater than or equal to 8 bytes.

6.1.5 Trap Alarm

Function Description


Based on TCP/IP protocol, SNMP usually adopts UDP port 161 (SNMP) and 162 (SNMP-traps), SNMP protocol agent exists in the network device and adopts information specific to the device (MIBs) as the device interface; these network devices can be monitored or controlled via Agent. When a trap event occurs, the message is transmitted by SNMP Trap. At this point, an available trap receiver can receive the trap message.

Operation Path

Open in order: "Network Config > SNMP > Trap Alarm".

Interface Description

Trap Alarm interface is as follows:

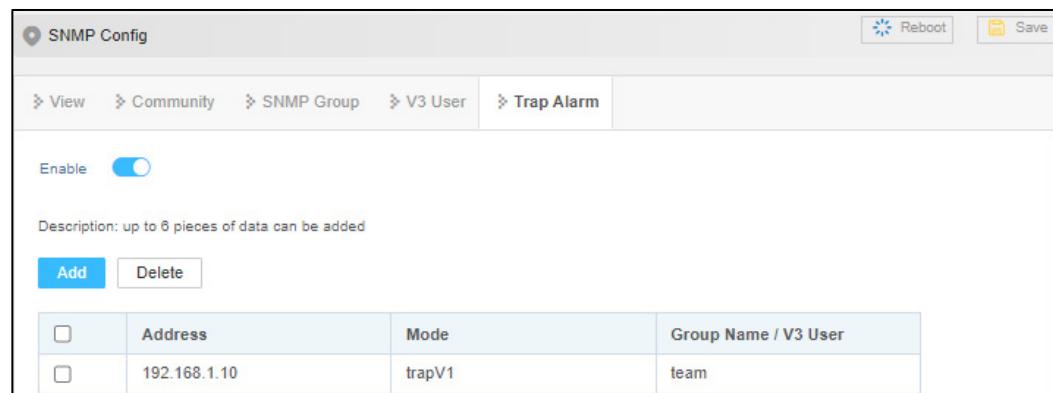

The main element configuration description of Trap alarm interface:

Interface Element	Description
Address	IP address of SNMP management device, used for receiving alarm information, such as PC.
Mode	Managed device that sends an active alert to the NMS. After the inform alarm is sent out, it will wait for the confirmation message from NMS, and if no confirmation message is received, it will resend the Inform message; Trap message has no confirmation process. The types of

Interface Element	Description
	<p>alarm messages include:</p> <ul style="list-style-type: none"> • trapV1: send snmpV1 trap • trapV2c: send snmpV2c trap • trapV3: send snmpV3 trap • informV2c: send snmpv2 inform • informV3: send snmpV3 inform
Group Name/V3 User	Community name or snmpv3 user name.

6.2 LLDP

LLDP is a layer 2 topology discovery protocol, its basic principle is: Devices in network send the status information message to adjacent device, and each port in the device stores its own information, if there is change in the status of local device, it can also send updated information to the adjacent device directly connected to it. Adjacent devices will store the information in standard SNMP MIB bank. The network management system could inquiry the connection status of current layer 2 from SNMP MIB bank. It should be noted that LLDP is only a remote device status information discovery protocol, which cannot complete the network device configuration, port control and other functions.

6.2.1 Global Config

Function Description

Enable LLDP and configuration.

Operation Path

Open in order: "Network Config > LLDP > Global Config".

Interface Description

The Global Config interface is as follows:

Main elements configuration description of the Global Config interface:

Interface Element	Description
Enable	The radio box of LLDP function status, check to enable.
Send Period	LLDP transmission period, range 5-300, unit: second, default: 30 Note: When no device status changes, the device periodically sends LLDP packets to its adjacent nodes. The interval is called the period for sending LLDP packets.
Apply	Click "Apply" button to operate.

6.2.2 Port Config

Function Description

Configure the LLDP work mode of the port.

Operation Path

Open in order: "Network Config > LLDP > Port Config".

Interface Description

Check Port Config interface as below:

LLDP Config					
Global Config		Port Config			
Neighbor Info					
Config					
<input type="checkbox"/>	Local Port	Port State	Port Config		
<input type="checkbox"/>	fe1	up	txrx-enable		
<input type="checkbox"/>	fe2	down	txrx-enable		
<input type="checkbox"/>	fe3	down	txrx-enable		
<input type="checkbox"/>	fe4	down	txrx-enable		
<input type="checkbox"/>	fe5	down	txrx-enable		
<input type="checkbox"/>	fe6	down	txrx-enable		
<input type="checkbox"/>	fx7	down	txrx-enable		
<input type="checkbox"/>	fx8	down	txrx-enable		
<input type="checkbox"/>	gx1	down	txrx-enable		
<input type="checkbox"/>	gx2	down	txrx-enable		

The main element configuration description of Port Config interface:

Interface Element	Description
Local Port	The corresponding port name of the device Ethernet port.
Port State	Port connection status: <ul style="list-style-type: none"> • UP • down
Port Config	The options of LLDP working modes of device port are as follows: <ul style="list-style-type: none"> • tx-enable: working mode is Tx, only sending and not receiving LLDP message. • rx-enable: working mode Rx, only receiving and not sending LLDP message. • txrx-enable: working mode is TxRx, both sending and receiving LLDP message. • disable: working mode Disable, neither receiving nor sending LLDP message. <p>Note: By default, the working mode of LLDP is TxRx when global LLDP is enabled.</p>

6.2.3 Neighbor Info

Function Description


On the "Neighbor Info" page, user can look over the relative information of neighbors.

Operation Path

Open in order: " Network Config > LLDP > Neighbor Info".

Interface Description

Neighbor Info interface is as follows:

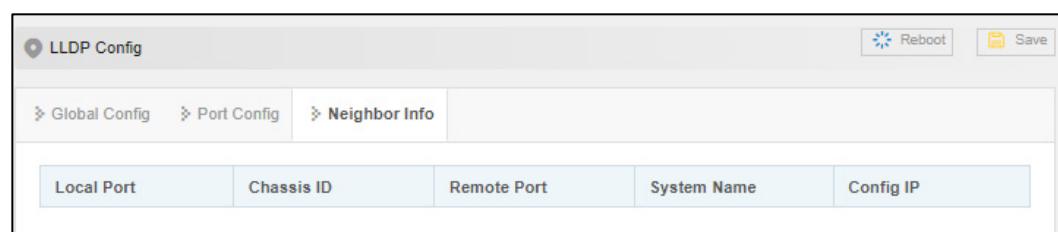

Main elements configuration description of neighbor information interface:

Interface Element	Description
Local Port	Local port number of local switch connected to adjacent devices.
Chassis ID	Bridge MAC address of neighbor device or port.
Remote Port	Port number of neighbor device.
System Name	System name of the neighbor device.
Config IP	Management IP address of neighbor device or port.

6.3 DHCP-Server

DHCP(Dynamic Host Configuration Protocol) is usually applied to large LAN environment. Its main functions are centralized management and IP address distribution, which enables the host in the network to acquire IP address, Gateway address, DNS server address dynamically and improve the usage of addresses.

6.3.1 DHCP Switch

Function Description


On the "DHCP Switch" page, user can enable/disable DHCP.

Operation Path

Open in order: "Network Config > DHCP-Server > DHCP Switch".

Interface Description

DHCP Switch interface is as follows:

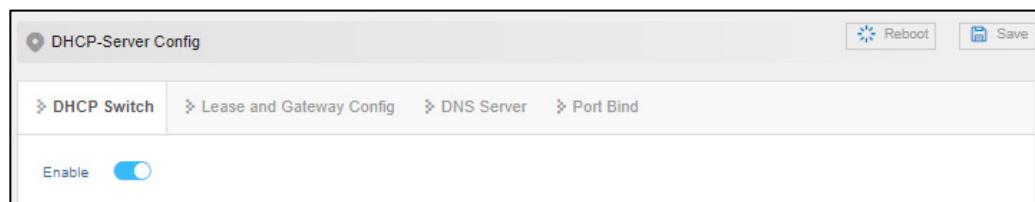

The main element configuration description of DHCP Switch interface.

Interface Element	Description
Enable	After enabling the switch, the device, as a DHCP server, can distribute IP address to devices connected to it by setting static allocation address table.

6.3.2 Lease and Gateway Config

Function Description

Set the valid time and default gateway for the IP address of the client.

Operation Path

Open in order: "Network Config > DHCP-Server > Lease and Gateway Config".

Interface Description

The Lease and Gateway Config interface is as follows:

DHCP-Server Config

Lease Time: 120

Default Gateway:

Apply

Reboot Save

The main element configuration description of Lease and Gateway Config interface:

Interface Element	Description
Lease Time	<p>The IP address of the client is valid for use. The default value is 120, the unit is min, and the value range is 1-65535.</p> <p>Note:</p> <p>When the time of ip address obtained by dhcp client reaches the lease time, it needs to renew it otherwise the ip address would be invalid and dhcp client needs to request ip address again.</p>
Default Gateway	Default client gateway address, example: 255.255.255.0.

6.3.3 DNS Server

Function Description

Configure the DNS server address. Parse the domain name to be visited to an IP address, realizing domain name access network.

Operation Path

Open in order: "Network Config > DHCP-Server > DNS Server".

Interface Description

DNS Server interface is as follows:

DHCP-Server Config

DNS Server 1:

DNS Server 2:

Apply

Reboot Save

The main element configuration description of DNS Server interface:

Interface Element	Description
DNS Server 1	IP address of domain name resolution server 1.
DNS Server 2	IP address of domain name resolution server 2.

6.3.4 Port Bind

Function Description

Bind the relationship of IP addresses assigned by ports.

Take Device A and Device B as examples.

If DHCP Server function is enable on Device A and two static address allocation tables are set:

- 192.168.1.19 corresponds to Port 1;
- 192.168.1.20 corresponds to Port 2.

After the function of automatically obtaining the IP address is enabled on Device B,

- If Device A is connected to Device B through port 1, Device B can automatically obtain the IP address of 192.168.1.19;
- If Device A is connected to Device B through port 2, Device B can automatically obtain the IP address of 192.168.1.20.

Operation Path

Open in order: "Network Config > DHCP-Server > Port Bind".

Interface Description

Port Bind interface is as follows:

<input type="checkbox"/>	IP Address	Port
<input type="checkbox"/>	192.168.1.254	fe1

The main element configuration description of Port Bind interface:

Interface Element	Description
IP Address	IP address distributed by DHCP address pool, the IP addresses that client gains in the port.
Port	The corresponding port name of the device Ethernet port.

6.4 Access Control

6.4.1 Port Authentication

IEEE 802.1X protocol is a port-based network access control protocol, that is, user devices are authenticated on the ports of LAN access devices so that user devices can control access to network resources.

IEEE 802.1x adopts the logic functions of "controllable port" and "uncontrollable port" in the authentication architecture, thus realizing the separation of business and authentication. After the user passes the authentication, the business flow and the authentication flow realize the separation. It has no special request to the subsequent packet processing, the service can be very flexible, and has a great advantage in business especially in carrying out broadband multicast, all services are not restricted by the authentication method.

802.1X structure mainly consists of three parts:

- Supplicant: user or client that wants to get the authentication;
- authentication server: typical example is RADIUS server;
- Authentication system Authenticator: access devices, such as wireless access points, switches, etc

Function Description

Enable and configure 802.1X Authentication parameter.

Operation Path

Open in order: "Network Config > Access Control > Port Authentication".

Interface Description

The screenshot of Port Authentication interface is as follows:

Access Control

Port Authentication Authentication Database

IEEE 802.1X Authentication

Timed Update Authentication Time

Radius Server

Shared Authentication Password

Authentication Server Address

Authentication Server Port No.

Apply

Config

<input type="checkbox"/>	Port Number	IEEE 802.1x Port Authentication
<input type="checkbox"/>	fe1	disable
<input type="checkbox"/>	fe2	disable
<input type="checkbox"/>	fe3	disable
<input type="checkbox"/>	fe4	disable
<input type="checkbox"/>	fe5	disable
<input type="checkbox"/>	fe6	disable
<input type="checkbox"/>	fx7	disable
<input type="checkbox"/>	fx8	disable
<input type="checkbox"/>	gx1	disable
<input type="checkbox"/>	gx2	disable

The main element configuration description of Port Authentication interface:

Interface Element	Description
IEEE802.1X Authentication	Enable/disable IEEE802.1X authentication.
Timed Update Authentication Time	The time range of authentication upgrade interval is 60~4095, unit: second. The reauthentication interval of 802.1x used for strengthening the security of authentication.
Radius Server	<p>Local internal Radius server and external Radius server configuration:</p> <ul style="list-style-type: none"> Local: built-in Radius server, if choosing internal Radius server, the applicant will only use the username and password of internal Radius database. Remote: fill in the IP address, port number and shared password for

Interface Element	Description
	authentication of the authentication server if using external Radius server.
Shared Authentication Password	The shared password character string used for device accessing Radius server. Supports combinations of letters, numbers and symbols with a length of no more than 50 characters.
Authentication Server Address	IP address of Radius server
Authentication Server Port No.	The port number of the Radius server. The default is 1812, value range is 1-65535.
Port Number	Switch port number.
IEEE802.1x Port Authentication	IEEE802.1X authentication state of the port: <ul style="list-style-type: none"> enable; disable.

6.4.2 Authentication Database

Function Description


Set the username and password locally authenticated by 802.1X , and add, delete and save users.

Operation Path

Open in order: "Network Config > Access Control > Authentication Database".

Interface Description

Screenshot of Authentication Database interface:

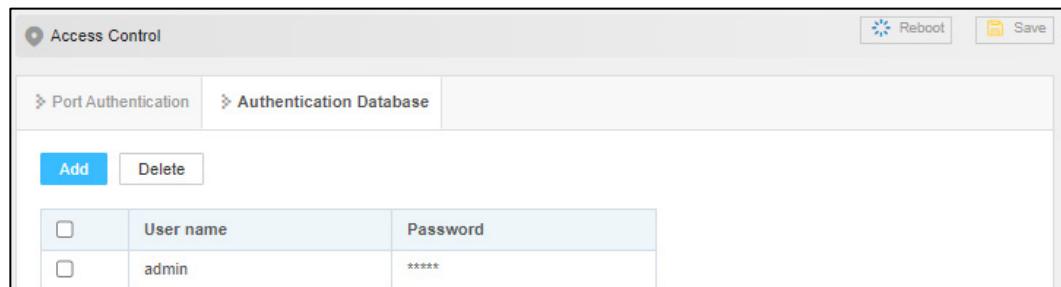

The main element configuration description of database authentication interface:

Interface Element	Description
User name	Username of logging into local authentication.
Password	Password of logging into local authentication

6.5 QoS

6.5.1 Classification of QoS


QoS (Quality of Service) is used to evaluate the ability of the service provider to meet the service needs of customers. As for network business, service quality includes transmission bandwidth, transfer delay, data packet loss rate and so on.

The service quality issues that traditional network faces are caused by network congestion. The so-called congestion refers to the phenomenon that the forwarding rate decreases and extra delays are introduced due to the relative shortage of supply resources, thus leading to the decline of service quality. As for congestion management, queue technology is generally adopted. It uses a queue algorithm to classify flow, then uses some priority algorithm to send these flow.

Priority is used to tag the priority of message transmission.


- CoS

Ethernet defines 8 business priorities (CoS, Class of Service) in the VLAN TAG of Ethernet frame head. The 802.1Q label head of 4 bytes has included 2-byte TPID (Tag Protocol Identifier) and 2-byte TCI (Tag Control Information), TPID's is 0x8100, the following graph has displayed the details of 802.1Q label head, priority field is 802.1p priority.

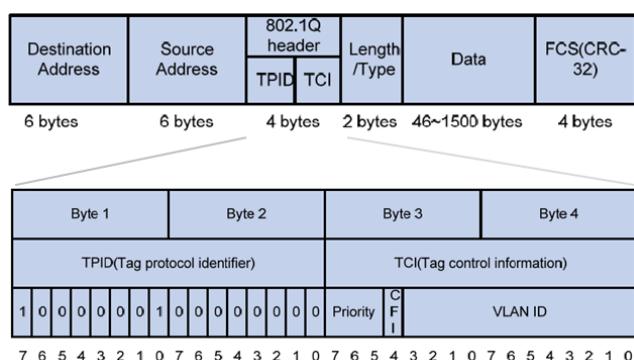

- ToS

The ToS (Type of Service) domain in the head of IP message is called DS (differential Services) domain, in which the priority of DSCP is represented by the first 6 digits (0 ~ 5 digits) of this domain, with a value range of 0-63, and the last 2 digits (6 and 7 digits) are reserved. The higher the priority value, the higher the priority.

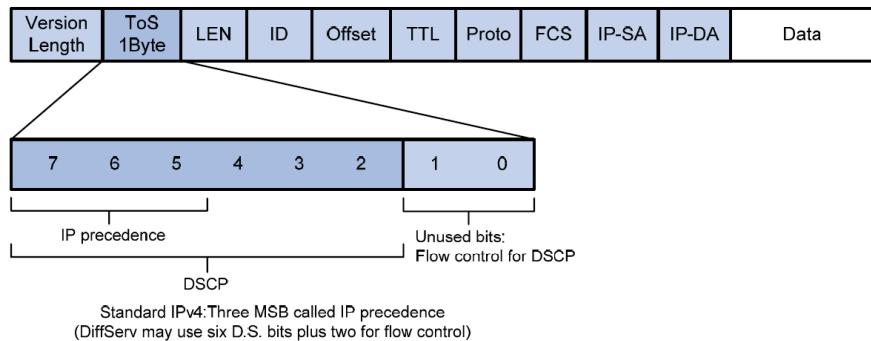

Function Description

Set the queue mechanism of the device and the priority parameters of each port.

Operation Path

Open in order: "Network Config > QoS > Classification of QoS".

Interface Description

Screenshot of Classification of QoS interface:

<input type="checkbox"/>	Port	Check DSCP	Check CoS	Port Priority
<input type="checkbox"/>	fe1	disable	disable	0
<input type="checkbox"/>	fe2	disable	disable	0
<input type="checkbox"/>	fe3	disable	disable	0
<input type="checkbox"/>	fe4	disable	disable	0
<input type="checkbox"/>	fe5	disable	disable	0
<input type="checkbox"/>	fe6	disable	disable	0
<input type="checkbox"/>	fx7	disable	disable	0
<input type="checkbox"/>	fx8	disable	disable	0
<input type="checkbox"/>	gx1	disable	disable	0
<input type="checkbox"/>	gx2	disable	disable	0

The main element configuration description of Classification of QoS interface:

Interface Element	Description
Queue Mechanism	<p>Queuing scheduling setting, options are:</p> <ul style="list-style-type: none"> Weighted Fair (8:4:2:1): according to the queue's weighted value 8:4:2:1, weighted round-robin queue scheduling algorithm would schedule queues in turn to ensure that each queue can get some service time. Strict (Strict Priority): Strict priority queue scheduling algorithm includes 4 queues and schedules in the decreasing order of priority. When the queue with fairly high priority is empty, then it would send groupings of queue with fairly low priority.
Port	The switch port number.
Check DSCP	After checking the checkbox, the priority of ToS would be inspected during queue scheduling.
Inspect CoS	After checking the checkbox, the priority of CoS would be inspected during queue scheduling.
Port Priority	<p>To configure default port priority for ports that haven't enabled ToS and CoS priority. The value range is 0-7. The higher the value, the higher the priority.</p> <p>Note: By default, switch would use port priority in place of the 802.1p priority the port comes with when receiving message to control the quality of service the messages deserve.</p>



Note

- When the ToS and CoS are not enabled, queuing and scheduling are in the order of port priority.
- When the ToS or CoS are enabled, queuing and scheduling according to ToS or CoS instead of considering port priority.
- If the ToS and CoS are enabled at the same time, queuing according to ToS priority. When the ToS values are the same, queuing according to CoS priority.

6.5.2 CoS Mapping

Function Description


On the page of “CoS Mapping”, user can configure mapping between CoS value and priority queues.

Operation Path

Open in order: “Network Config > QoS > CoS Mapping”.

Interface Description

Screenshot of CoS Mapping interface:

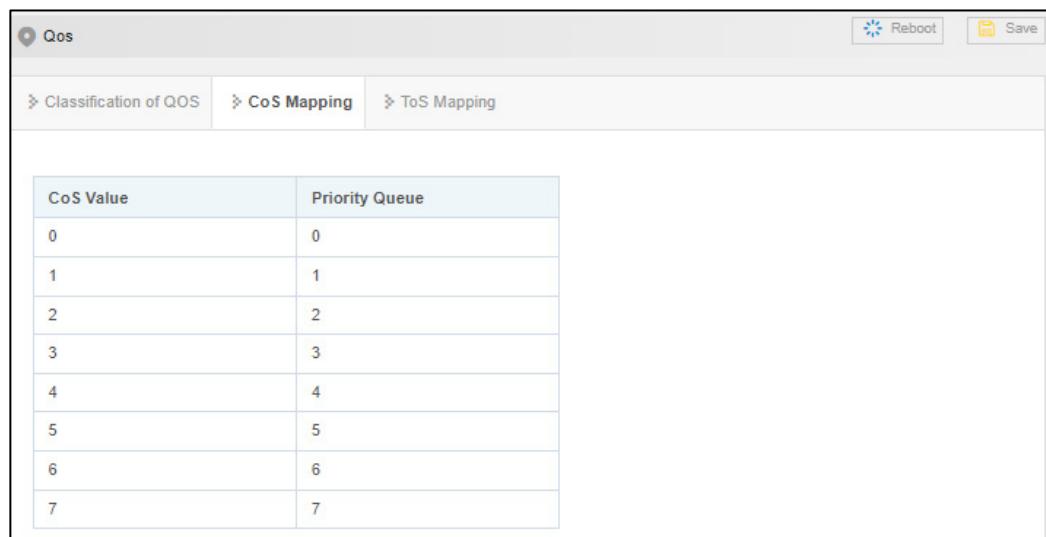

CoS Value	Priority Queue
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7

The main element configuration description of CoS Mapping interface:

Interface Element	Description
CoS Value	Display CoS value.
Priority Queue	Display the mapping between CoS values and priority queues, with priority queues ranging from 0 to 7 levels. The higher the value, the higher the priority.

6.5.3 ToS Mapping

Function Description


On the page of “ToS Mapping”, user can configure mapping between ToS value and priority queue.

Operation Path

Open in order: “Network Config > QoS > ToS Mapping”.

Interface Description

Screenshot of ToS Mapping interface:

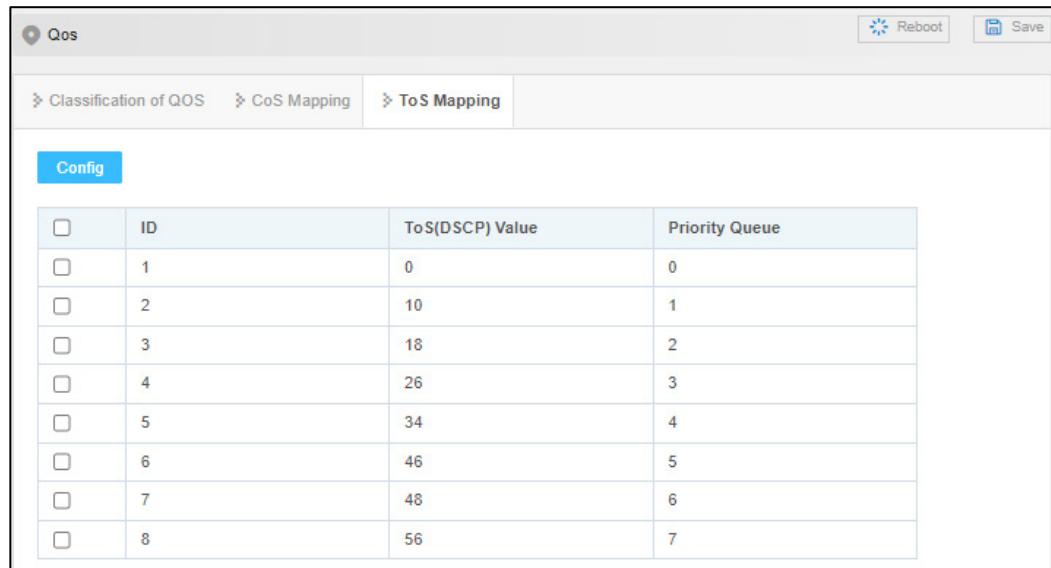

ID	ToS(DSCP) Value	Priority Queue
1	0	0
2	10	1
3	18	2
4	26	3
5	34	4
6	46	5
7	48	6
8	56	7

The main element configuration description of ToS mapping interface:

Interface Element	Description
ToS(DSCP) Value	It displays ToS (DSCP) in hexadecimal and decimal format simultaneously. The value in the bracket is decimal.
Priority Queue	Set the mapping between ToS values and priority queues, with priority queues ranging from 0 to 7 levels. The higher the value, the higher the priority.

6.6 Modbus TCP

Function Description

Modbus TCP monitoring function can be enabled. Client can read the switch system, port, ring network, frame statistics and other parameters information via Modbus TCP protocol, which are convenient for various integrated systems to monitor and manage the device.



Note

Please see the switch read-only register address information in the "Modbus TCP data sheet" of this section.

Operation Path

Open in order: "Network Config > Modbus TCP".

Interface Description

Modbus TCP screenshot:



The main element configuration description of Modbus TCP interface:

Interface Element	Description
Modbus TCP	Modbus TCP monitoring enable switch, which is disabled by default. After enabling Modbus TCP monitoring function, client can read the switch device information via function code 4.

Modbus TCP Data Sheet

Switch read-only register (support function code 4) address information and stored device information, as the table below:



Note

The following table address is hexadecimal format, please convert it into suitable format according to the demands of current debugging tool.

Information Type	Address (HEX)	Data Type	Description
System Information	0x0000	2 Words	Device ID (reserved)
	0x0002	16 Words	Name (ASCII display)
	0x0012	16 Words	Description (ASCII display)
	0x0022	3 Words	MAC Address (HEX display)
	0x0025	2 Words	IP address
	0x0027	16 Words	Contact Information
	0x0037	16 Words	Firmware Ver (ASCII display)
	0x0047	16 Words	Hardware Ver (ASCII display)
	0x0057	16 Words	Serial No.
	0x0067	1 Word	Power supply 1 status: • 0x0000: OFF • 0x0001: ON
	0x0068	1 Word	Power supply 2 status: • 0x0000: OFF • 0x0001: ON
Port Information	0x1000-0x101B	1 Word	Port connection status: • 0x0000: Link down • 0x0001: Link up • 0x0002: Disable • 0xFFFF: No port
	0x101D-0x1038	1 Word	Port operating mode: • 0x0000: 10M-Half • 0x0001: 10M-Full • 0x0002: 100M-Half • 0x0003: 100M-Full • 0x0004: 1G-Half • 0x0005: 1G-Full • 0xFFFF: No port
	0x1039-0x1054	1 Word	Port flow control status: • 0x0000: OFF

Information Type	Address (HEX)	Data Type	Description
			<ul style="list-style-type: none"> • 0x0001: ON • 0xFFFF: No port
	0x1056-0x1071	1 Word	<p>Port interface type:</p> <ul style="list-style-type: none"> • 0x0000: Copper port • 0x0001: Fiber port • 0x0002: Combo port • 0xFFFF: No port

Example: Modbus TCP Configuration

Acquire the switch device name information via DebugTool analogue client, the switch information as follows:

- Switch default IP address: 192.168.1.254;
- Address of switch register that stores the device name information: 0x002;
- Number of switch register that stores the device name information: 16 words;

Operation Steps

First, configure the switch Modbus TCP monitoring enable.

Step 1 Log into Web configuration interface.

Step 2 Select "Network Config > Modbus TCP".

Step 3 Slide on the "Modbus TCP" enable switch, as shown in the figure below.




Step 4 End.

Then, run the debug tool software to acquire the device parameters.


Step 5 Open "Debug Tool".

Step 6 Click the drop-down list of "Create connection".

Step 7 Select "Create Modbus debugging > ModbusPoll", as the picture below.

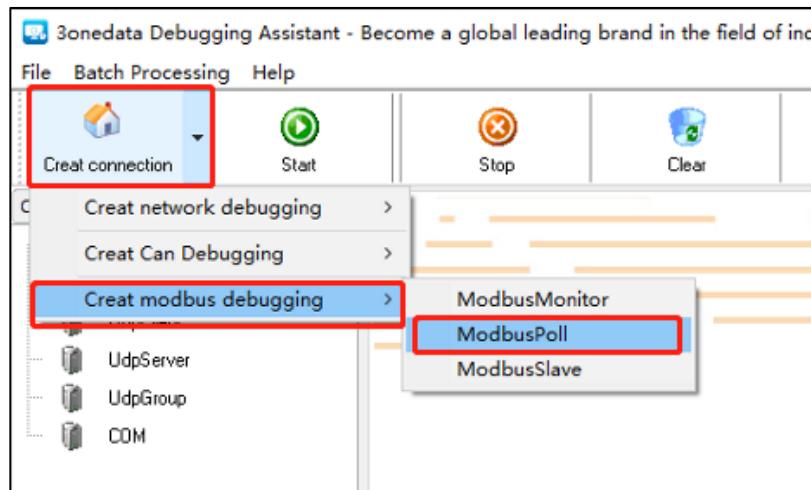

Step 8 Configuration window of ModbusPoll parameters pops up, the configuration as the picture below:

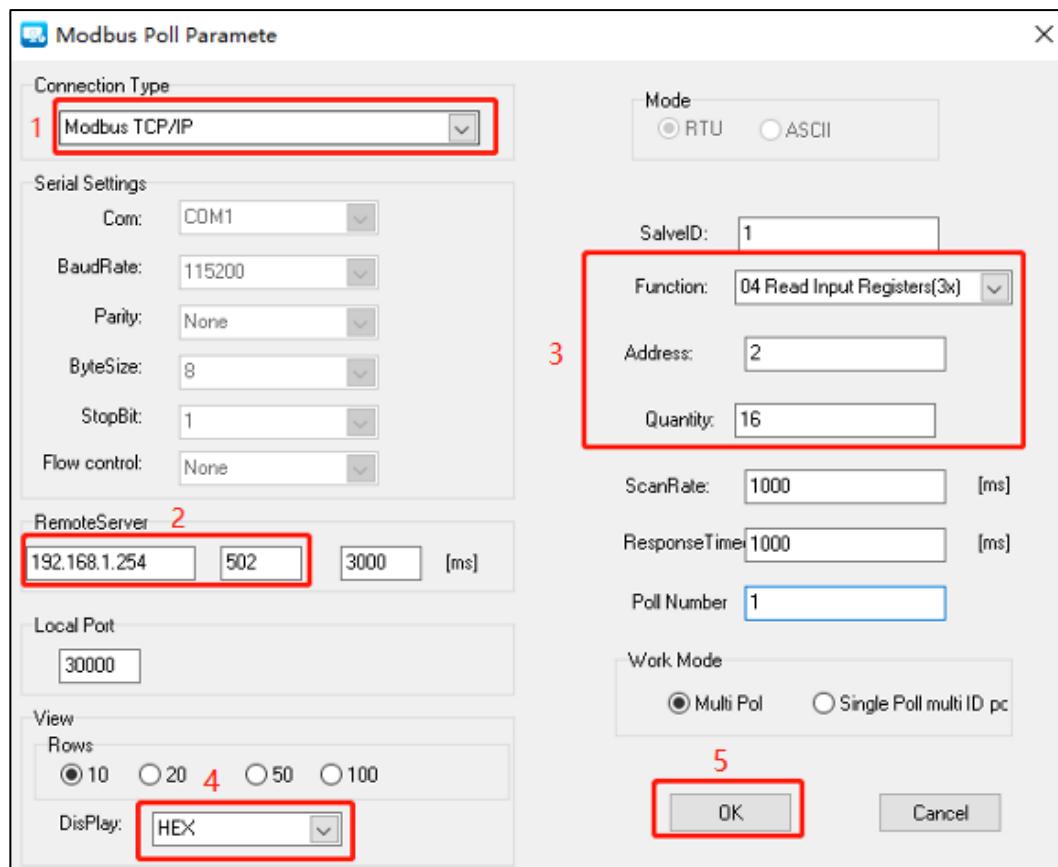


- 1 On the drop-down list of "Connection Type", select "Modbus TCP/IP";
- 1 Enter the switch IP address "192.168.1.254" and port number "502" on the column of "Remote Server";
- 2 Select "04 Read Input Registers (3x)" on the drop-down list of "Function";
- 3 Enter decimal device name register address "2" on the text box of "Address";

Notice:


Here the start address is decimal format, so hexadecimal register address should be converted into decimal format.

- 4 Enter the register amount "16" on the text box of "Quantity";
- 5 Select "HEX" on the drop-down list of "Display";
- 6 Click "OK".

Step 9 On the page of Debug Tool, select created ModbusPoll, and then click "Start";

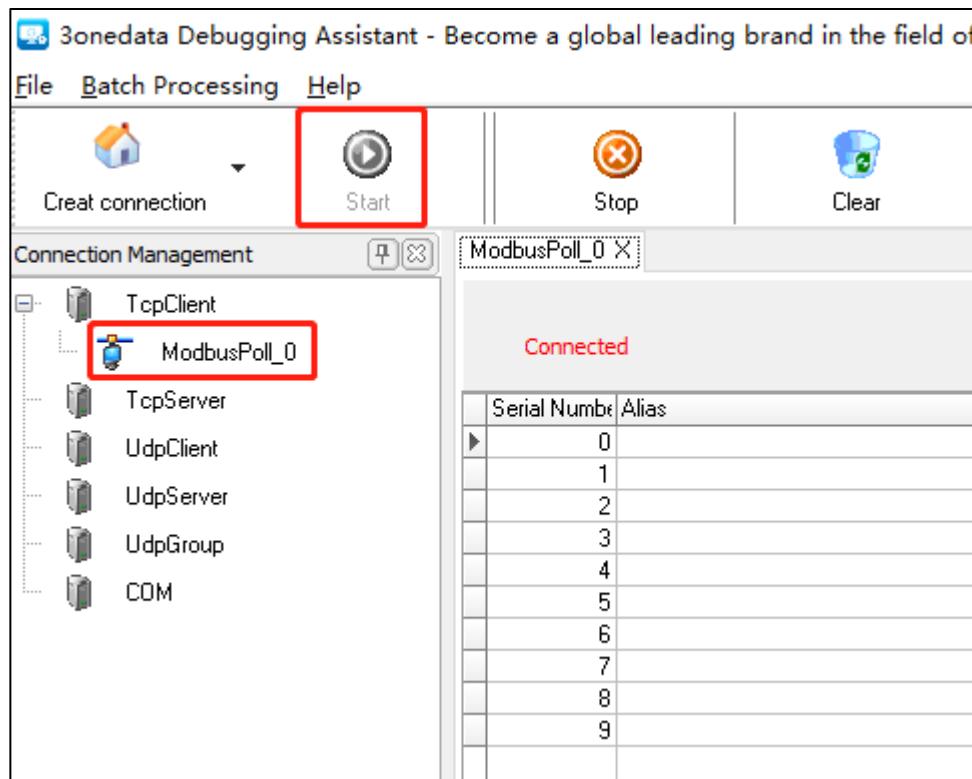

Step 10 Check responsive data, and convert the hexadecimal value read by register into ASCII code, displayed as "Industrial Switch";

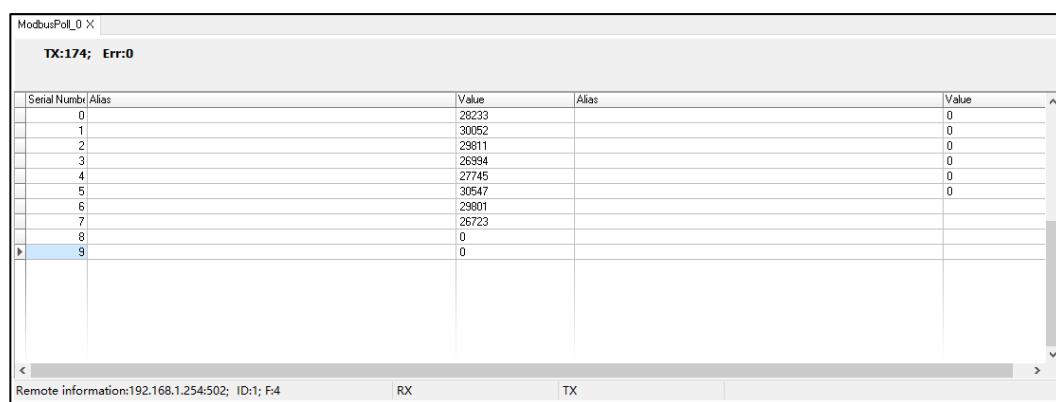

The screenshot shows the 'ModbusPoll_0 X' window with the title 'TX:174; Err:0'. It displays a table of data with 10 rows. The columns are 'Serial Number', 'Alias', 'Value', and 'Value' (under 'Alias'). The data is as follows:

Serial Number	Alias	Value	Value
0		26233	0
1		30052	0
2		29811	0
3		26594	0
4		27745	0
5		30547	0
6		29801	
7		26723	
8		0	
9		0	

At the bottom of the window, there is a status bar with 'Remote information:192.168.1.254:502; ID:1; F:4' and buttons for 'RX' and 'TX'.

Step 11 End.



Note

- Switch can establish 4 Modbus TCP monitoring connections at the same time.
- Switch Port Information, Frame Statistics and PoE Information. It supports the sequential read of port parameters of multiple registers. For example, address range of the register that stores port connection status information is 0x1000-0x101B, each register data is 1 word; when the start address of register is 0x1000, the register number is 1, it will read port 1 status; If the register quantity is 10, it will read the status from Port 1 to Port 10; If the port doesn't exist, then the read data will be 0xFFFF.

7 System Config

7.1 Network Diagnosis

7.1.1 Ping

Function Description

Ping is used to check whether the network is open or network connection speed. The Ping command uses the uniqueness of the IP addresses of the machines on the network to send a packet to the target IP address, and then asks the opposite end to return a packet with the same size to determine the connection status and delay value of the two network devices.

Operation Path

Open in order: "System Config > Network Diagnosis".

Interface Description

The Network Diagnosis interface is as follows:



The main element configuration description of Ping interface:

Interface Element	Description
Address	The IP address of the detected device, that is, the destination address. The device can check the network intercommunity to other devices via the ping command.

7.2 NTP

7.2.1 NTP Config

The full name of NTP protocol is Network Time Protocol. Its purpose is to deliver uniform, standard time on the international Internet. Specific implementation scheme is appointing several clock source websites in the network to provide user with timing service, and these websites should be able to mutually compare to improve the accuracy. It can provide millisecond time correction, and is confirmed by the encrypted way to prevent malicious protocol attacks.

Function Description


Enable and configure NTP server.

Operation Path

Open in order: "System Config > NTP > NTP Config".

Interface Description

The NTP Config interface is as follows:

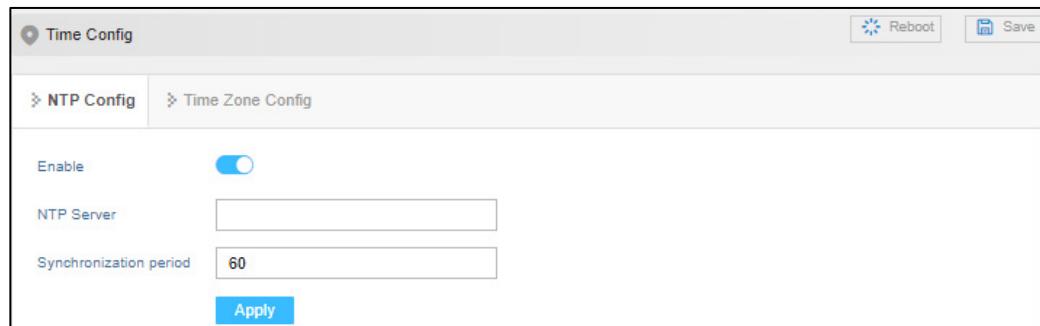

Main element configuration description of NTP Config interface:

Interface Element	Description
Enable	Enable/Disable NTP configuration.
NTP Server	IP address of NTP server, for example: 192.168.1.1. Note: As NTP client, the system will synchronize time with NTP server every 11 minutes.
Synchronization period	After obtaining the time from the server, the device synchronizes with the server time according to a certain time cycle to reduce the impact of network latency and ensure time accuracy. This time period is called the synchronization period.

7.2.2 Time Zone Config

Function Description

Configure the device time zone.

Operation Path

Open in order: "System Config > NTP > Time Zone Config".

Interface Description

Time Zone Config interface is as follows:



Main elements configuration description of Time Zone Config interface:

Interface Element	Description
Time Zone	UTC (Universal Time Coordinated) time zone. Due to different regions, users can freely set the system clock according to the regulations of their own country or region.

7.3 Alarm

After enabling alarm, when the device port is in an abnormal state, the administrator can be informed in time, and the device state can be quickly repaired to avoid excessive loss.

7.3.1 Relay Settings

Function Description


Set the enable and circuit mode of the relay.

Operation Path

Open in order: "System Config > Alarm > Relay Settings".

Interface Description

The Relay Settings interface is as follows:

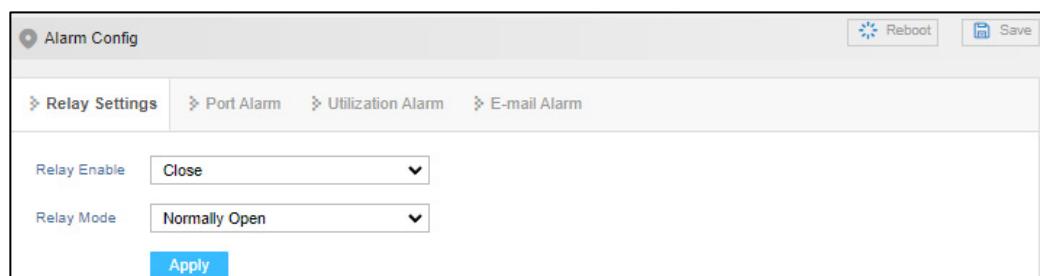

Main elements configuration description of Relay Settings interface:

Interface Element	Description
Relay Enable	Open/Close relay.
Relay Mode	Set the circuit state of the relay: <ul style="list-style-type: none">• Normally closed: when the relay is normal without alarm, it is in closed status; when alarm occurs, the relay is in open status;• Normally open: when the relay is normal without alarm, it is in open status; when alarm occurs, the relay is in closed status.

7.3.2 Port Alarm

Function Description

After enabling alarm, when the device port is in an abnormal state, the administrator can be informed in time, and the device state can be quickly repaired to avoid excessive loss.

Operation Path

Open in order: "System Config > Alarm > Port Alarm".

Interface Description

Port Alarm interface is as below:

Alarm Config								
<input type="button" value="Reboot"/> <input type="button" value="Save"/>								
<input type="button" value="Relay Settings"/> <input type="button" value="Port Alarm"/> <input type="button" value="Utilization Alarm"/> <input type="button" value="E-mail Alarm"/>								
Config								
	Port	State	Alarm Switch	Port Status Trap Switch	Egress Threshold	Egress Trap Switch	Ingress Threshold	Ingress Trap Switch
<input type="checkbox"/>	fe1	up	disable	enable	90	disable	90	disable
<input type="checkbox"/>	fe2	down	disable	enable	90	disable	90	disable
<input type="checkbox"/>	fe3	down	disable	enable	90	disable	90	disable
<input type="checkbox"/>	fe4	down	disable	enable	90	disable	90	disable
<input type="checkbox"/>	fe5	down	disable	enable	90	disable	90	disable
<input type="checkbox"/>	fe6	down	disable	enable	90	disable	90	disable
<input type="checkbox"/>	fx7	down	disable	enable	90	disable	90	disable
<input type="checkbox"/>	fx8	down	disable	enable	90	disable	90	disable
<input type="checkbox"/>	gx1	down	disable	enable	90	disable	90	disable
<input type="checkbox"/>	gx2	down	disable	enable	90	disable	90	disable

The main element configuration description of Port Alarm interface:

Interface Element	Description
Port	The corresponding port name of the device Ethernet port.
State	Port link status, display items as follows: <ul style="list-style-type: none"> • up • down
Alarm Switch	Port alarm function status, options as follows:

Interface Element	Description
	<ul style="list-style-type: none"> enable disable
Port Status Trap Switch	Port status Trap switch, options: <ul style="list-style-type: none"> enable disable
Egress Trap Switch	Enable the egress Trap switch. Send Trap information when the threshold is reached. Egress Trap switch, options: <ul style="list-style-type: none"> enable disable
Egress Threshold	When the egress port reaches the threshold, NMS software prompts an alarm. Value range of threshold is 5-95, unit: %.
Ingress Trap Switch	Enable the ingress Trap switch. Send Trap information when the threshold is reached. Ingress Trap switch, options: <ul style="list-style-type: none"> enable disable
Ingress Threshold	When the ingress port reaches the threshold, NMS software prompts an alarm. Value range of threshold is 5-95, unit: %.

7.3.3 Power Alarm

Function Description

Enable/disable the power alarm function.



Note

Only DC dual power supply supports power alarm, and AC current does not support power alarm.

Operation Path

Open in order: "System Config > Alarm > Power Alarm".

Interface Description

Power Alarm interface is as below:

Power	State	Alarm Switch	Trap Switch
1	off	disable	disable
2	on	disable	disable

Main elements configuration description of Power Alarm interface:

Interface Element	Description
Power	The corresponding name of this device's power supply
State	Device power link status, display items as follows: <ul style="list-style-type: none"> on: connected off: disconnected
Alarm Switch	Port alarm function status, options as follows: <ul style="list-style-type: none"> enable: alarm has been enabled. disable: the alarm is not enabled
Trap Switch	<ul style="list-style-type: none"> When the power alarm is enabled or disabled, select "enable" to send Trap information. When the power alarm is enabled or disabled, select "disable" to not send Trap information.

7.3.4 Utilization Alarm

Function Description


On the "Utilization Alarm" page, you can set CPU utilization and memory utilization alarm events. When the alarm event parameter value exceeds the set threshold, the device will continuously send out Trap information to inform relevant personnel. When the alarm event parameter value drops below the set threshold, the device will send out a Trap message to inform the relevant personnel.

Operation Path

Open in order: "System Config > Alarm > Utilization Alarm".

Interface Description

Utilization Alarm interface is as below:

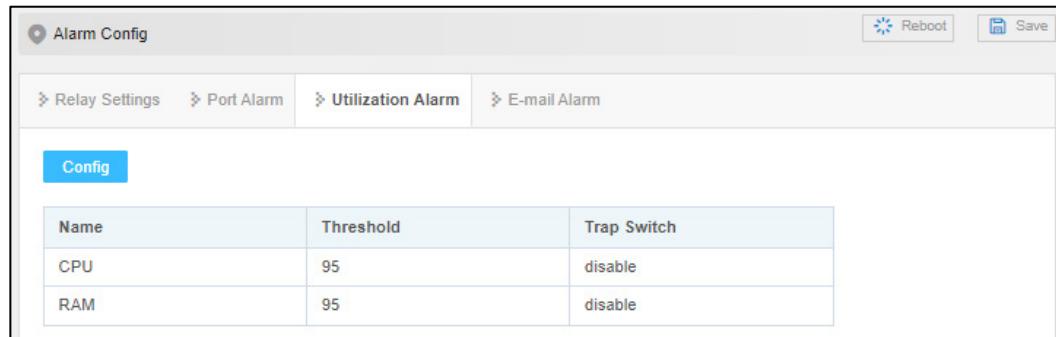

The main element configuration description of Utilization Alarm interface:

Interface Element	Description
CPU Trap Switch	Enable the CPU Trap switch, and send Trap information when the CPU utilization reaches the threshold. CPU Trap status, options: <ul style="list-style-type: none">enabledisable
CPU Threshold	CPU utilization threshold, when the CPU utilization reaches the threshold, an alarm will be generated. Value range of threshold is 5-95, unit: %.
RAM Trap Switch	Enable the memory Trap switch, and send Trap information when the memory utilization reaches the threshold. Memory Trap status, options: <ul style="list-style-type: none">enabledisable
RAM Threshold	Memory utilization threshold, when the memory utilization reaches the threshold, an alarm will be generated. Value range of threshold is 5-95, unit: %.

7.3.5 E-mail Alarm

Function Description


On the page of "E-mail Alarm", user can enable remote alarm.

Operation Path

Open in order: "System Config > Alarm > E-mail Alarm".

Interface Description

E-mail Alarm interface is as follows:

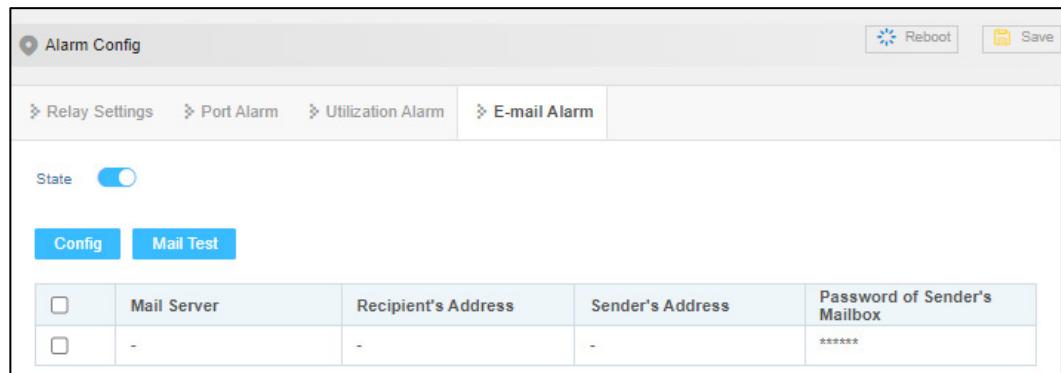

Main element configuration description of E-mail Alarm interface:

Interface Element	Description
State	Enable/disable E-mail alarm.
Mail Server	Server address of used E-mail should be filled according to the account of used E-mail address. The host IP address or used host name that provides E-mail delivery service for the device.
Recipient's Address	E-mail address used by abnormal event receiver.
Sender's Address	E-mail address of sender, account name used for logging in to the E-mail server.
Password of Sender's Mailbox	E-mail password of sender, corresponding password used for logging in to the E-mail account.



Notice

While using E-mail alarm, user must ensure that the switch is connected to network normally and the gateway of switch is same to the one of LAN.

7.4 Config File Config

7.4.1 Config File Update

Function Description


Upload and download configuration files

Operation Path

Open in order: "System Config > Config File Config > Config File Upgrade".

Interface Description

Configuration File Upgrade interface is as follows:

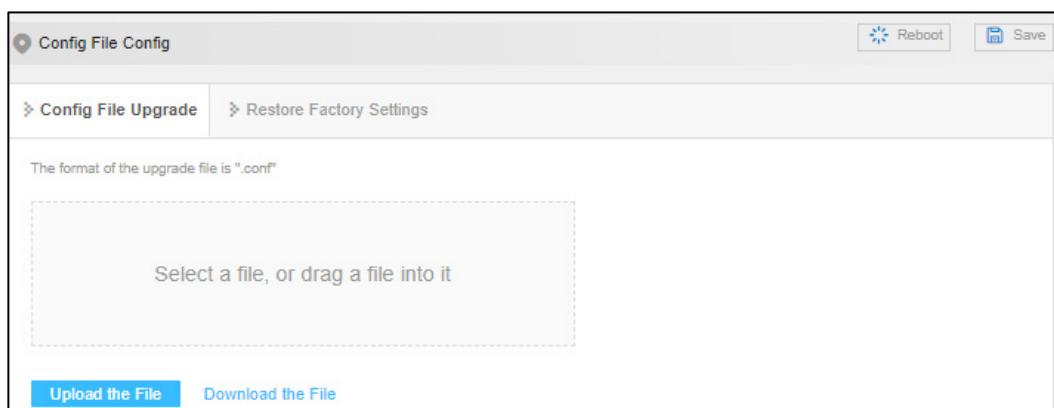

The main element configuration description of Config File Upgrade interface:

Interface Element	Description
Download the File	Download the configuration information files of current switch. Tips: Downloaded configuration files can be uploaded to other homogeneous devices, achieving repeated usage after one-time configuration.
Upload the File	The format of the configuration file is ".conf". Drag the profile into the upgrade box, or click "Click Upload" to select the profile.



Warning

In the process of uploading configuration files or upgrading software, please don't click or configure other WEB page of the switch, not even reboot the switch; otherwise, it will lead

to failure of configuration files uploading or software upgrading, or even cause system breakdown of the switch.

7.4.2 Restore Factory Settings

Function Description

Restore the device firmware to the factory configuration.

Operation Path

Open in order: "System Config > Restore Factory Settings".

Interface Description

The Restore Factory Settings interface is as follows.



The main element configuration description of Restore Factory Settings interface:

Interface Element	Description
One-Key Reset	<p>Restore factory settings of the switch.</p> <p>Note: Restore factory settings will cause all devices to be in the factory status, default IP address is "192.168.1.254".</p>

7.5 Upgrade

Function Description


Update and upgrade the device program via web.

Operation Path

Open in order: "System Config > Software Upgrade".

Interface Description

The Software Upgrade interface is as follows:

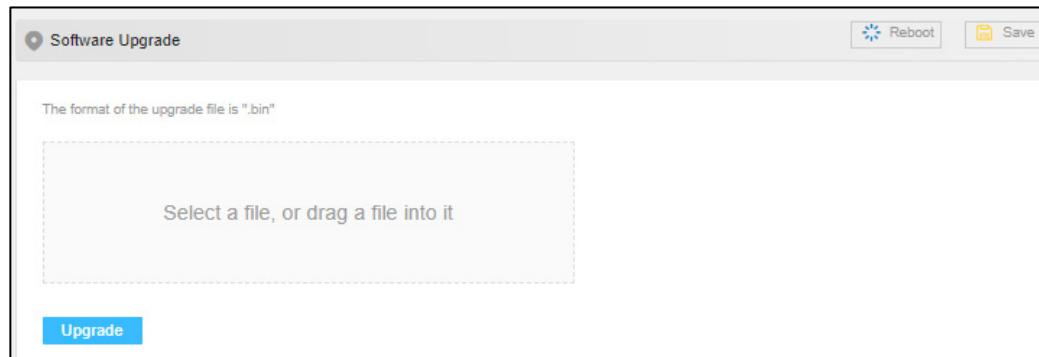

The main elements configuration description of Software Upgrade interface:

Interface Element	Description
Upgrade	Drag the upgrade file into the upgrade box or click the upgrade box to select the upgraded file in the format of ".bin".

7.6 Log Info

7.6.1 Log Info

Function Description

On the page of “Log Info”, user can check the log information of the device. Log information mainly records user operation, system failure, system safety and other information, including user log, security log and diagnostic log.


- User log: records user operations and system operation information.
- Security log: records information including account management, protocol, anti-attack and status.
- Diagnostic log: records information that assists in problem identification.

Operation Path

Open in order: "System Config > Log Info > Log Info".

Interface Description

The Log Info interface is as follows:

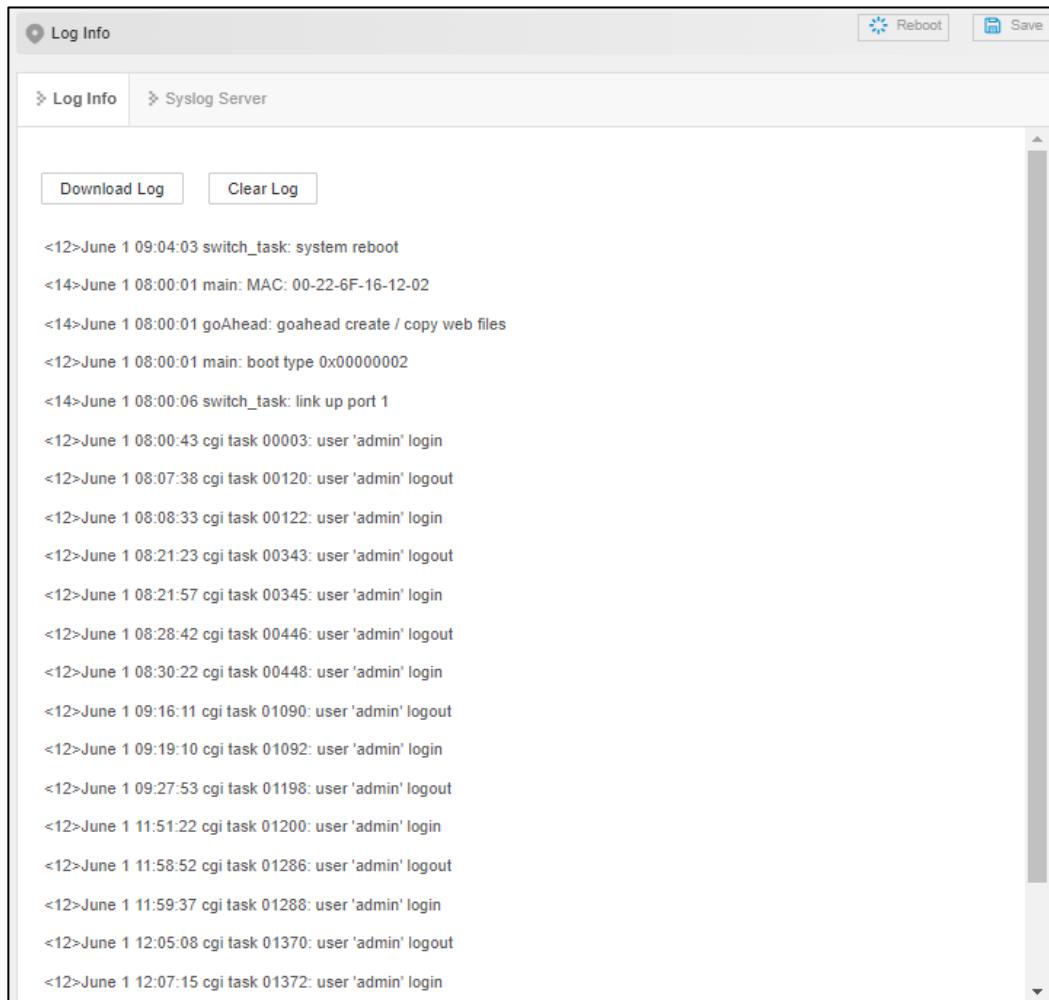

Main elements configuration description of Log Info interface:

Interface Element	Description
Download Log	Click the "Download Log" button to download the current log information to the local.
Clear Log	Click the "Clear Log" button to clear the current log information record.

7.6.2 Syslog Server

Function Description

Configure the Syslog server IP address, and the system log information can be sent to the configured syslog server.

Operation Path

Open in order: "System Config > Log Info > Syslog Server".

Interface Description

The Syslog Server interface is as follows:



The screenshot shows a user interface for configuring a Syslog Server. At the top, there is a navigation bar with a location icon and the text 'Log Info'. To the right of the navigation bar are two buttons: 'Reboot' and 'Save'. Below the navigation bar, there are two tabs: 'Log Info' (which is selected) and 'Syslog Server'. The 'Syslog Server' tab contains two input fields: 'Syslog Server' (with the placeholder 'IP address') and 'Port Number' (with the value '514'). At the bottom of the interface is a blue 'Apply' button.

Syslog server interface main elements configuration instructions:

Interface Element	Description
Syslog Server	IP address of Syslog server
Port Number	Syslog server port, input range: 1-65535.

8 FAQ

8.1 Sign in Problems

1. **Why the web page display abnormally when browsing the configuration via WEB?**

Before accessing the WEB, please eliminate IE cache and cookies. Otherwise, the web page will display abnormally.

2. **What should I do if I forget my login password?**

If you forget the login password, you can initialize the password by restoring factory settings. The specific method is to search by BlueEyes_II software and use restore factory setting function, then the password will be initialized. The initial user name and password are "admin".

3. **Is configuring via WEB browser same to configuring via BlueEyes_II software?**

Both configurations are the same, without conflict.

8.2 Configuration Problem

1. **How to configure the device restore default setting via DIP switch?**

Turn the DIP switch 2 to ON position, and restore default setting after power on again.

2. Why the bandwidth can't be increased after configuring Trunking (port aggregation) function?

Check whether the port attributes set to Trunking are consistent, such as rate, duplex mode, VLAN and other attributes.

3. How to deal with the problem that part of switch ports are impassable?

When some ports on the switch are impassable, it may be network cable, network adapter and switch port faults. User can locate the faults via following tests:

- Keep connected computer and switch ports unchanged, change other network cables;
- Keep connected network cable and switch port unchanged, change other computers;
- Keep connected network cable and computer unchanged, change other switch port;
- If the switch port faults are confirmed, please contact supplier for maintenance.

4. How about the order of port self-adaption state detection?

The port self-adaption state detection is conducted according to following order: 1000Mbps full duplex, 100Mbps full duplex, 100Mbps half-duplex, 10Mbps full duplex, 10Mbps half-duplex, detect in order from high to low, connect automatically in supported highest speed.

8.3 Alarm Problem

1. When the device alarms, except BlueEyes_II software nether alarm information display area will display alarm information, is there any other way to notify technical staffs?

When the device alarms, monitoring host computer buzzer will continue to emit alarm sounds.

8.4 Indicator Problem

1. Why is the power supply indicator off?

Possible reasons include:

- Not connected to the power socket; troubleshooting, connected to the power socket.
- Power supply or indicators faults; troubleshooting, change the power supply or device test.
- Power supply voltage can't meet the device requirements; troubleshooting, configure the power supply voltage according to the device manual.

2. Link/Act indicator isn't bright, what's the reason?

Possible reasons include:

- The network cable portion of Ethernet copper port is disconnected or bad contact; troubleshooting, connect the network cable again.
- Ethernet terminal device or network card works abnormally; troubleshooting, eliminate the terminal device fault.
- Not connected to the power socket; troubleshooting, connected to the power socket.
- Interface rate doesn't match the pattern; troubleshooting, examine whether the device transmission speed matches the duplex mode.

3. Ethernet copper port and fiber port indicator are connected normally, but can't transmit data, what's the reason?

When the system is power on or network configuration changes, the device and switch configuration in the network will need some time. Troubleshooting, after the device and switch configuration are completed, Ethernet data can be transmitted; if it's impassable, power off the system, and power on again.

4. Why does the communication crashes after a period of time, namely, it cannot communicate, and it returns to normal after restarting?

Reasons may include:

- Surrounding environment disturbs the product; troubleshooting, product grounding adopts shielding line or shields the interference source.
- Site wiring is not normative; Troubleshooting, optical fiber, network cable, optical cable cannot be arranged with power line and high-voltage line.
- Network cable is disturbed by static electricity or surge; Troubleshooting, change the shielded cable or install a lightning protector.
- High and low temperature influence; troubleshooting, check the device temperature usage range.

9

Maintenance and Service

Since the date of product delivery, our company provides 5-year product warranty. According to our company's product specification, during the warranty period, if the product exists any failure or functional operation fails, our company will repair or replace the product for users free of charge. However, the commitments above do not cover damage caused by improper usage, accident, natural disaster, incorrect operation or improper installation.

In order to ensure that consumers benefit from our company's managed switch products, consumers can get help and solutions in the following ways:

- Internet Service;
- Service Hotline;
- Product repair or replacement;

9.1 Internet Service

More useful information and tips are available via our company website. Website: <http://www.3onedata.com>


9.2 Service Hotline

Users of our company's products could call technical support office for help. Our company has professional technical engineers to answer your questions and help you solve the product or usage problems ASAP. Free service hotline: +86-4008804496

9.3 Product Repair or Replacement

As for the product repair, replacement or return, customers should firstly confirm with the company's technical staff, and then contact the salesmen to solve the problem. According to the company's handling procedure, customers should negotiate with our company's technical staff and salesmen to complete the product maintenance, replacement or return.

3onedata

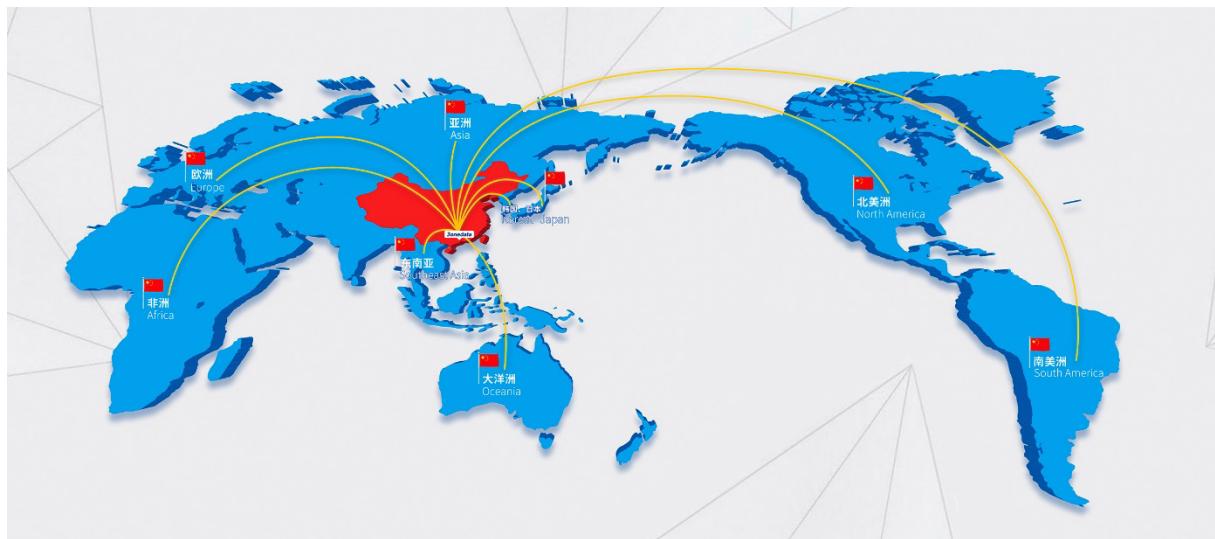

3onedata Co., Ltd.

Headquarter Address: 3/B, Zone 1, Baiwangxin High Technology Industrial Park, Song Bai Road, Nanshan District, Shenzhen, 518108, China

Technology Support: tech-support@3onedata.com

Service Hotline: 4008804496

Official Website: <http://www.3onedata.com>